

LIOB-101 I/O Module

Installation instructions

Instructions de montage


Montageanweisung



Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

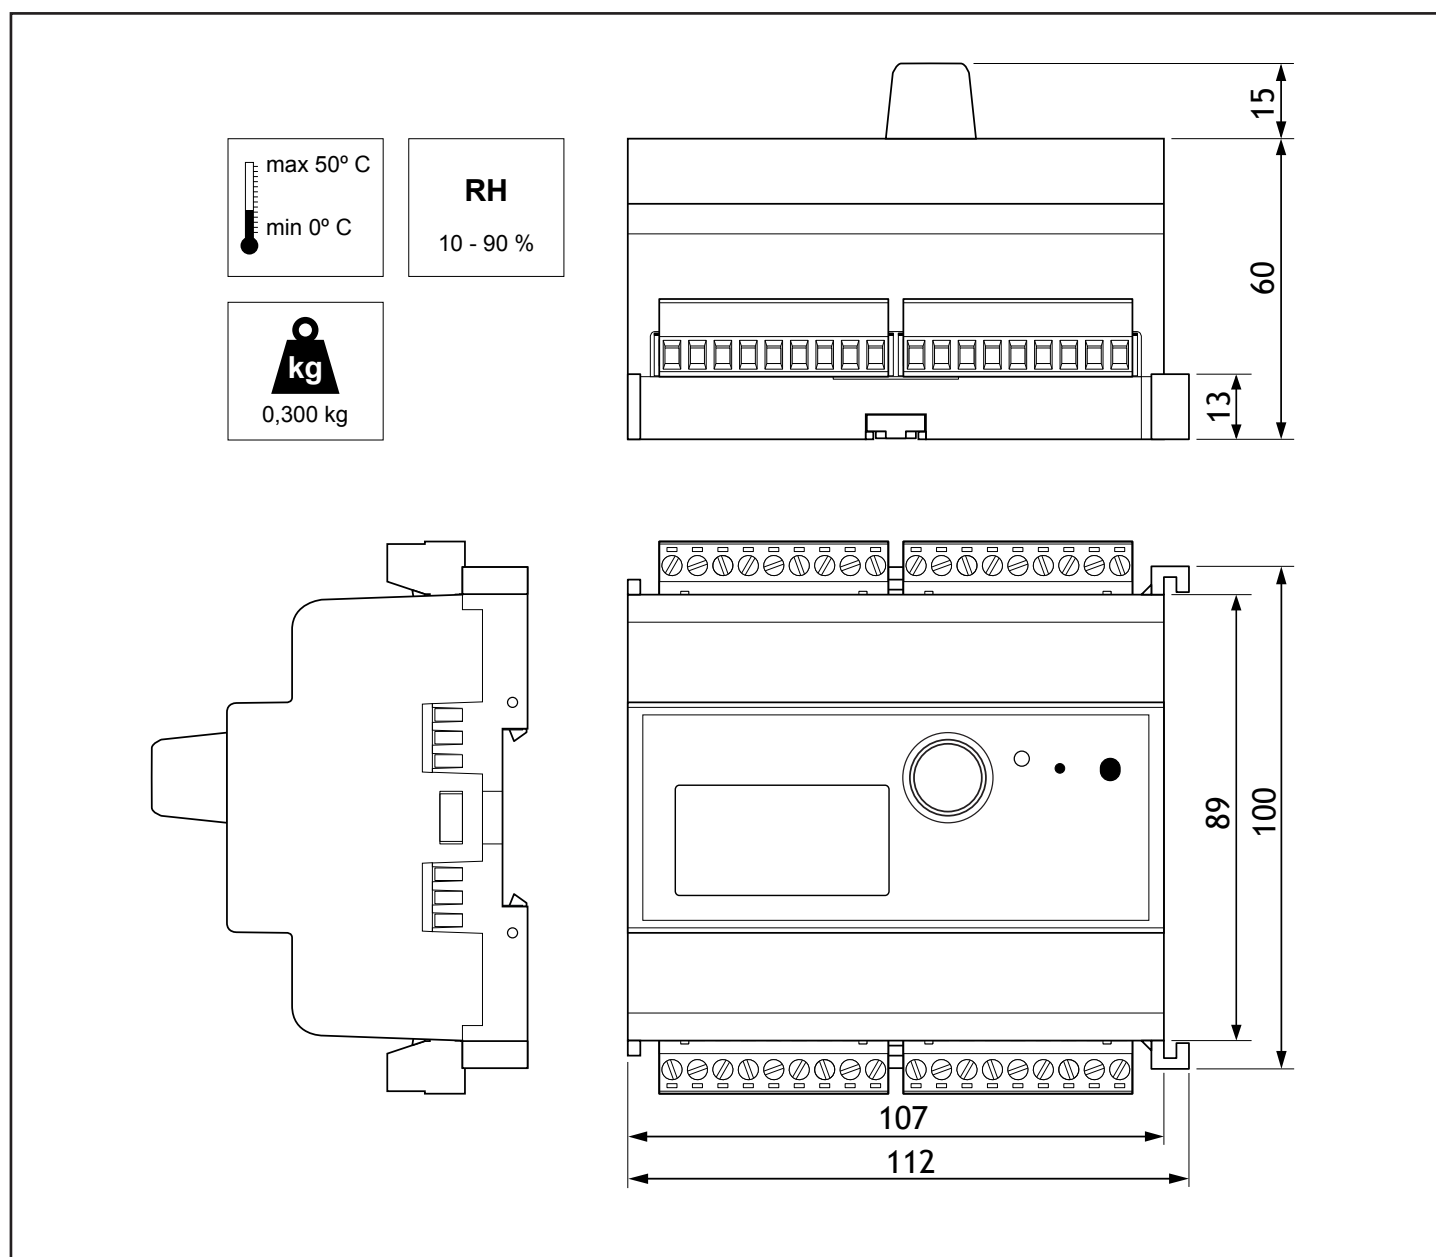

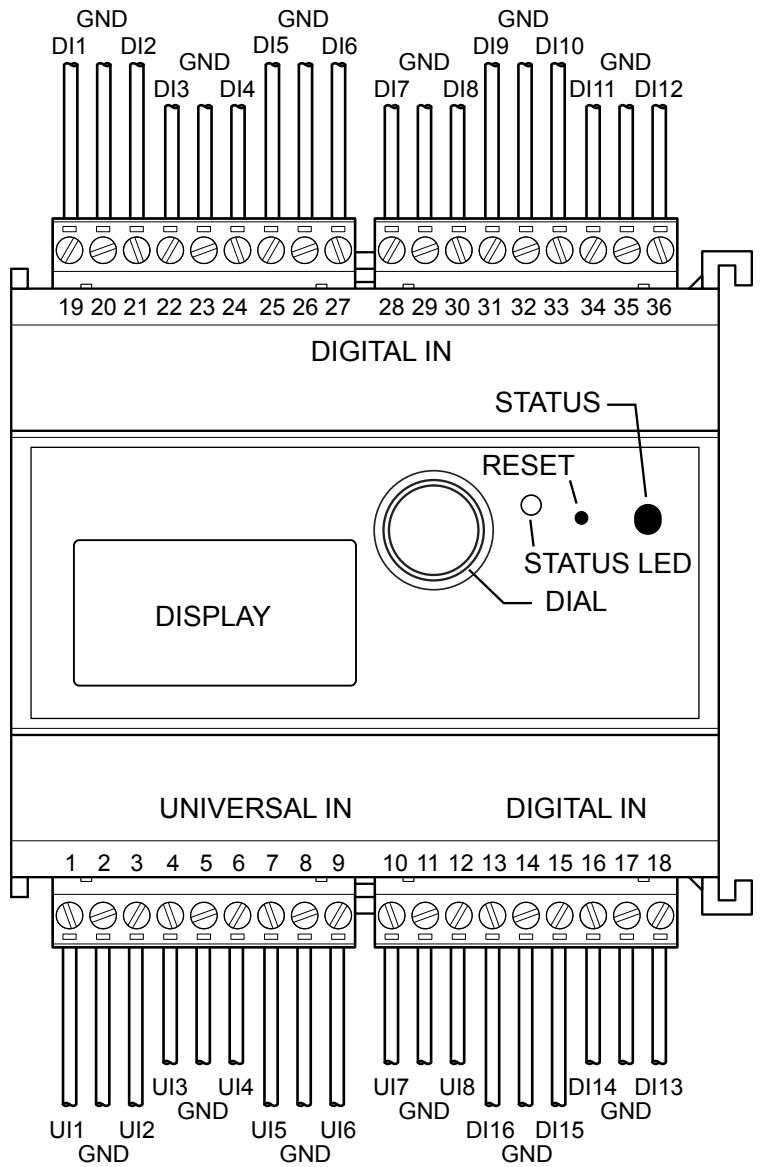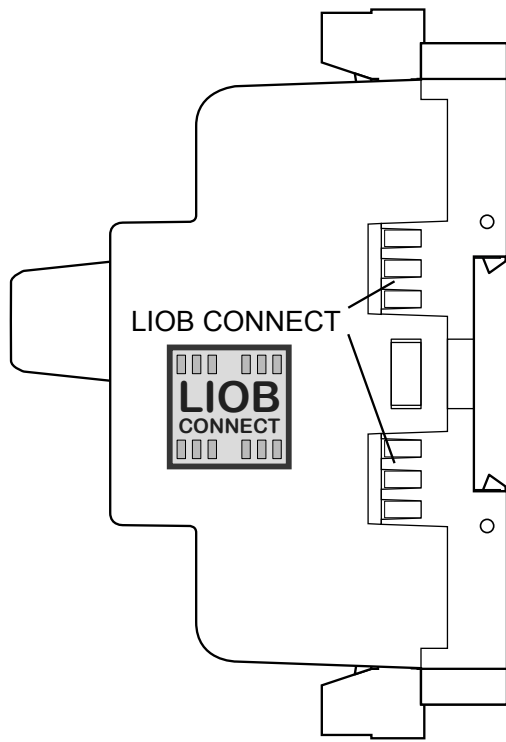

Buttons


STATUS	Status Button
RESET	Reset Button
DIAL	Turn-and-Push Dial

Connectors

UNIVERSAL INPUT	1	Input UI1
	2	Input GND
	3	Input UI2
	4	Input UI3
	5	Input GND
	6	Input UI4
	7	Input UI5
	8	Input GND
	9	Input UI6
	10	Input UI7
	11	Input GND
	12	Input UI8
DIGITAL INPUT	13	Input DI16
	14	Input GND
	15	Input DI15
	16	Input DI14
	17	Input GND
	18	Input DI13

Connectors


DIGITAL INPUT	19	Input DI1
	20	Input GND
	21	Input DI2
	22	Input DI3
	23	Input GND
	24	Input DI4
	25	Input DI5
	26	Input GND
	27	Input DI6
	28	Input DI7
	29	Input GND
	30	Input DI8
	31	Input DI9
	32	Input GND
	33	Input DI10
	34	Input DI11
	35	Input GND
	36	Input DI12

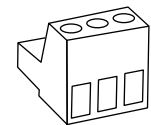

4.5 lb-in/0.5 Nm


9 poles:
Weidmüller
BLZP 5.08/09/180

 0.2 - 2.5 mm²




Status LED		
STATUS	OFF	Unconfigured / Offline
	GREEN	Normal Operation
	ORANGE	Manual Mode
	RED	Error
	FLICKERING	Traffic
	RED FLASHING	Fallback Override

max. 4 L-IOB devices
with one L-POW

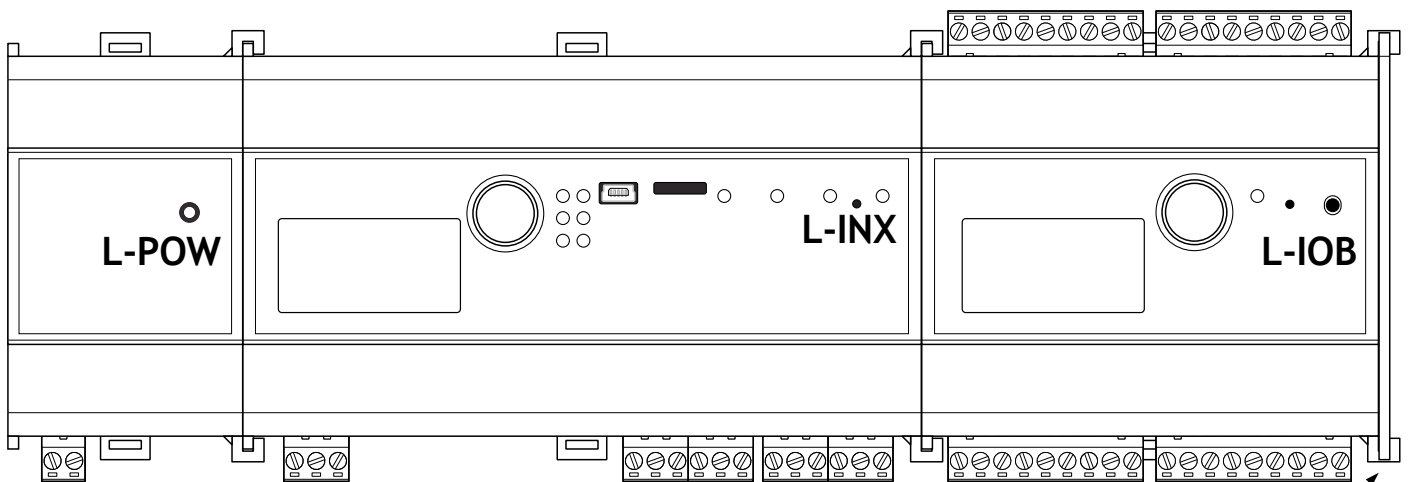


Install the cover on last device

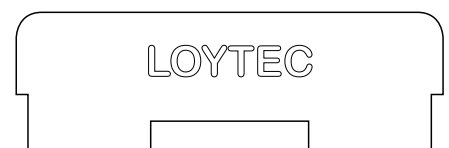

Please update the firmware of the device first,
see www.loytec.com

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

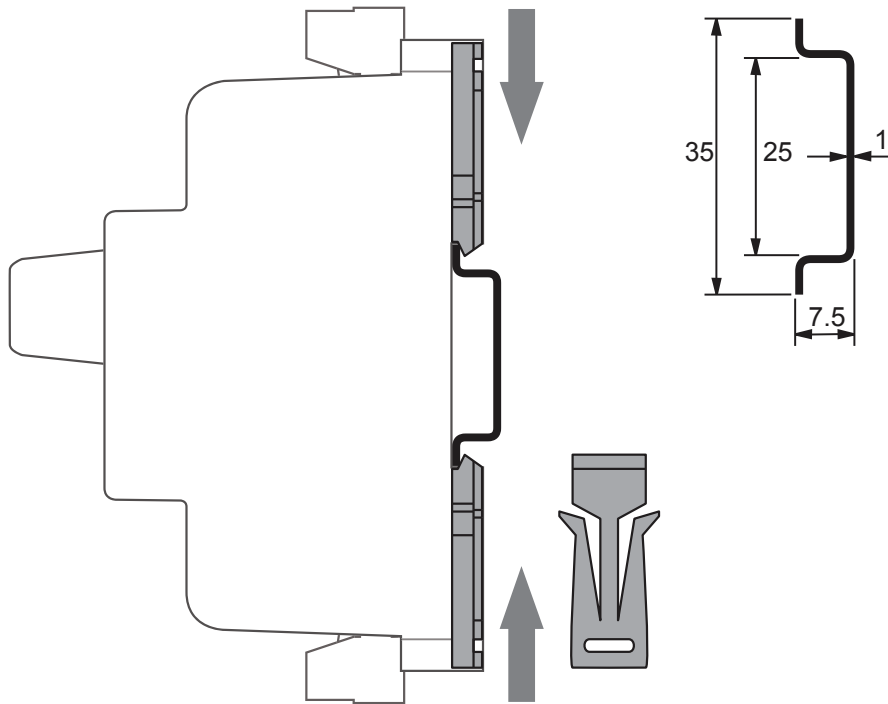

Node ID of the device

Serial number of the device

