

LIOB-103 I/O Module

Installation instructions

Instructions de montage


Montageanweisung



Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

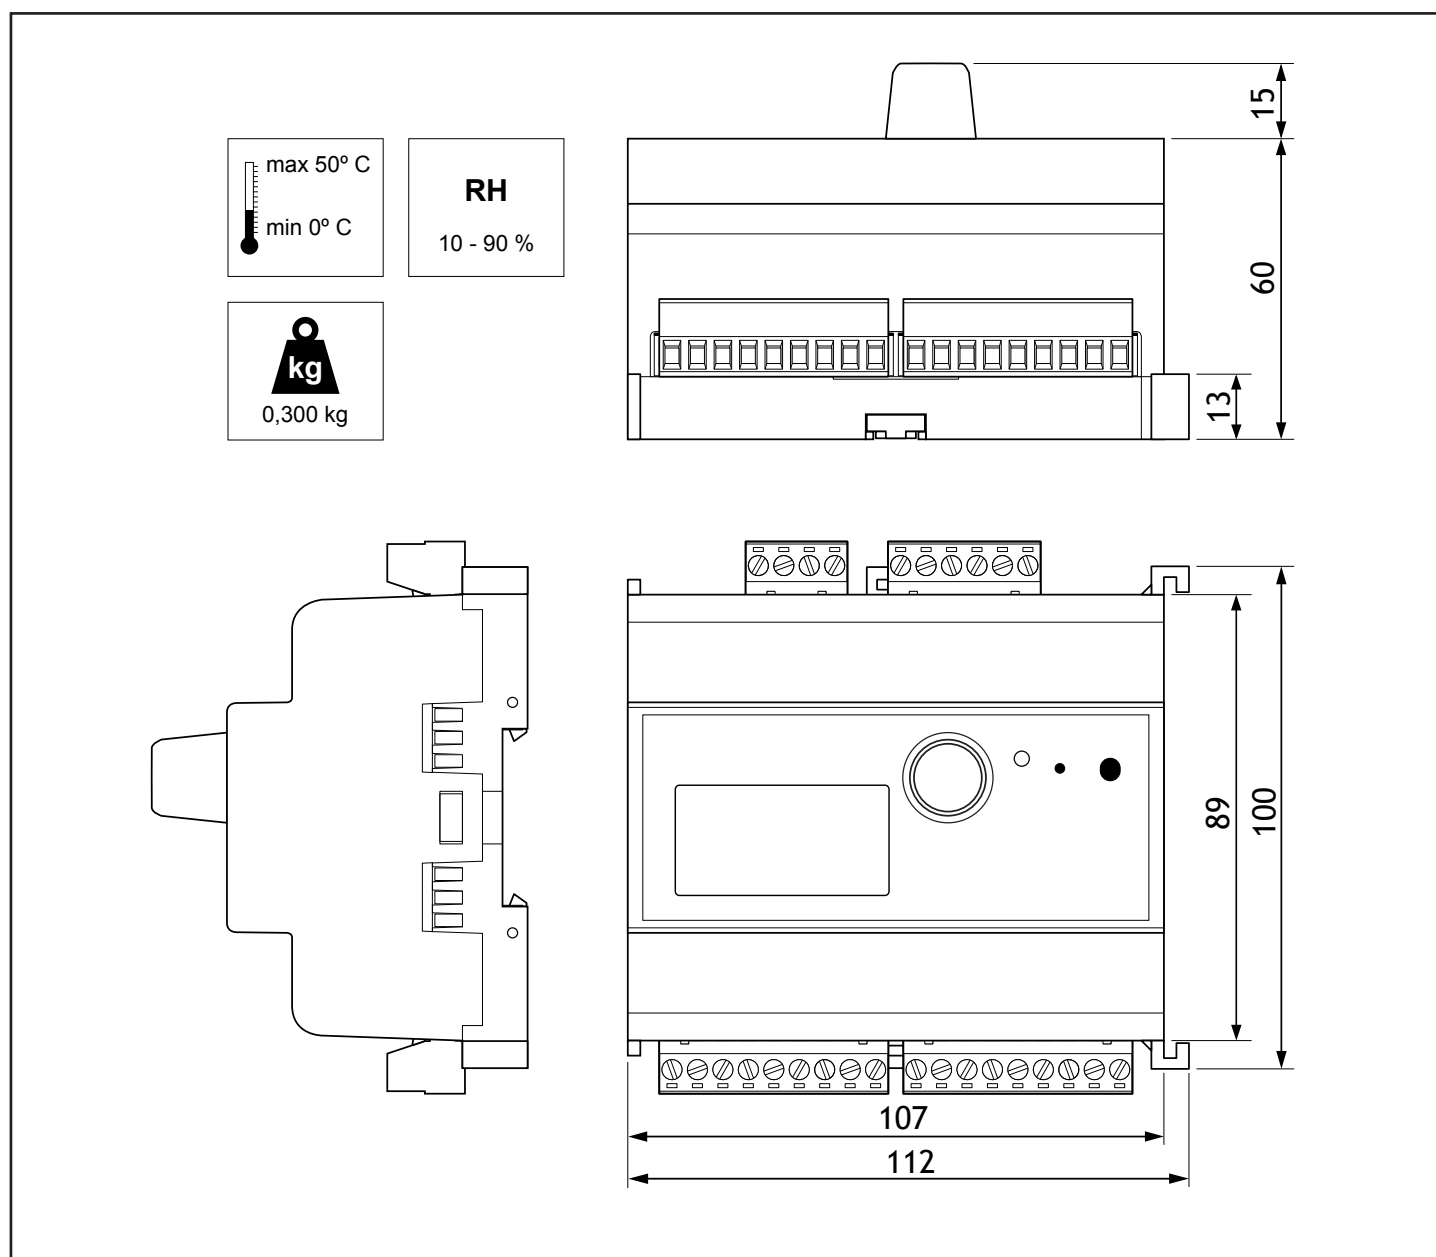

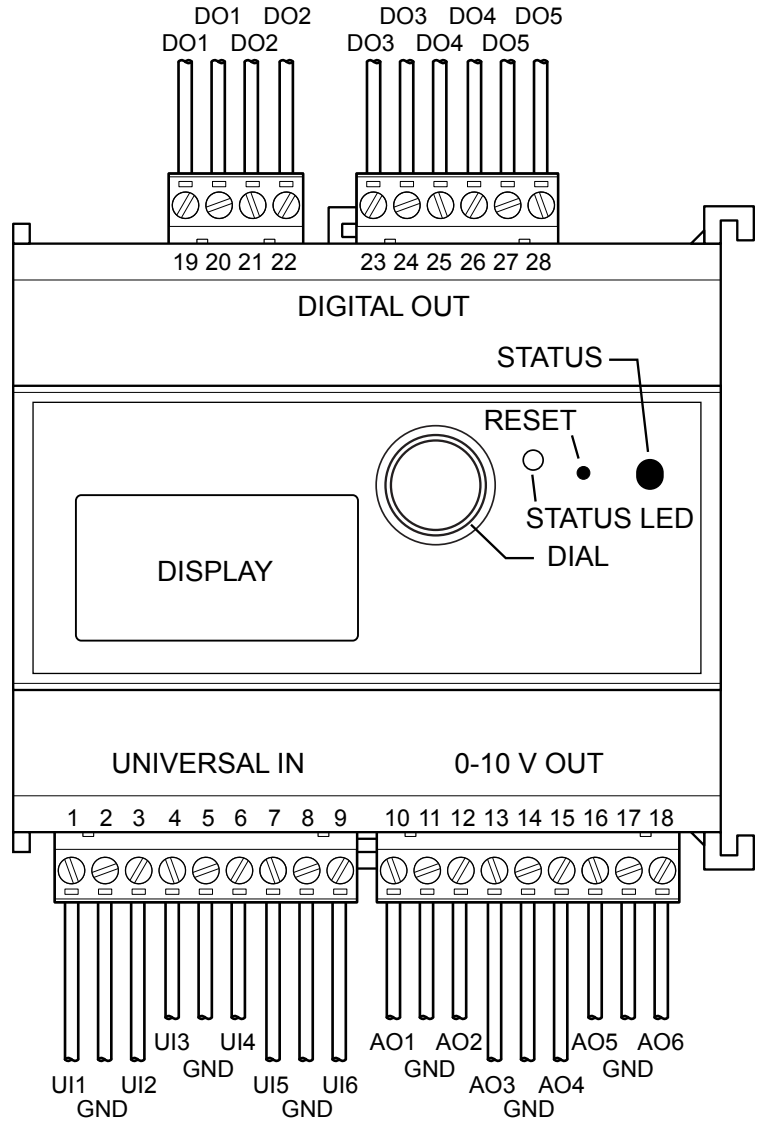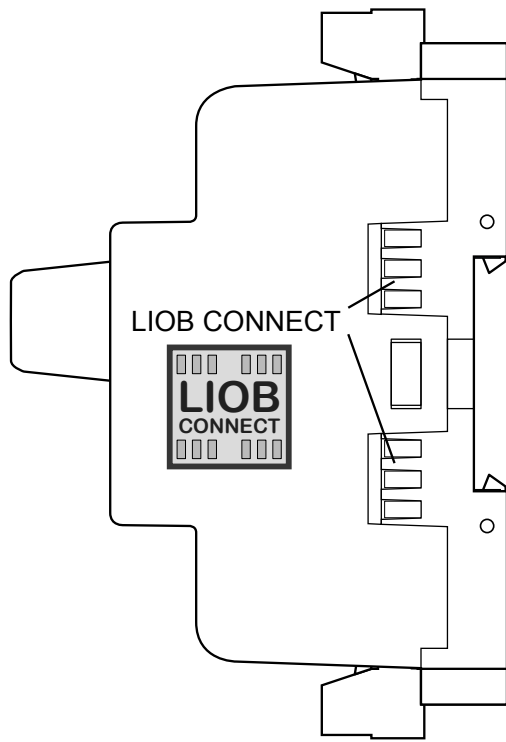

Buttons


| | |
|--------|--------------------|
| STATUS | Status Button |
| RESET | Reset Button |
| DIAL | Turn-and-Push Dial |

Connectors

| | | |
|-------------------------|----|------------|
| UNIVERSAL INPUT | 1 | Input UI1 |
| | 2 | Input GND |
| | 3 | Input UI2 |
| | 4 | Input UI3 |
| | 5 | Input GND |
| | 6 | Input UI4 |
| | 7 | Input UI5 |
| | 8 | Input GND |
| | 9 | Input UI6 |
| ANALOG OUTPUT 0-10 V | 10 | Output AO1 |
| | 11 | Output GND |
| | 12 | Output AO2 |
| | 13 | Output AO3 |
| | 14 | Output GND |
| | 15 | Output AO4 |
| | 16 | Output AO5 |
| | 17 | Output GND |
| | 18 | Output AO6 |

Connectors


| | | |
|---------------------------------|----|------------|
| DIGITAL OUTPUT RELAY 16 A | 19 | Output DO1 |
| | 20 | Output DO1 |
| | 21 | Output DO2 |
| | 22 | Output DO2 |
| | 23 | Output DO3 |
| | 24 | Output DO3 |
| | 25 | Output DO4 |
| | 26 | Output DO4 |
| | 27 | Output DO5 |
| | 28 | Output DO5 |

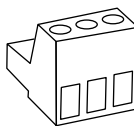

4.5 lb-in/0.5 Nm


4 poles: Weidmüller BLZP 5.08/04/180
 6 poles: Weidmüller BLZP 5.08/06/180
 9 poles: Weidmüller BLZP 5.08/09/180

 0.2 - 2.5 mm²



| Status LED | | |
|------------|--------------|------------------------|
| STATUS | OFF | Unconfigured / Offline |
| | GREEN | Normal Operation |
| | ORANGE | Manual Mode |
| | RED | Error |
| | FLICKERING | Traffic |
| | RED FLASHING | Fallback Override |

max. 4 L-IOB devices
with one L-POW

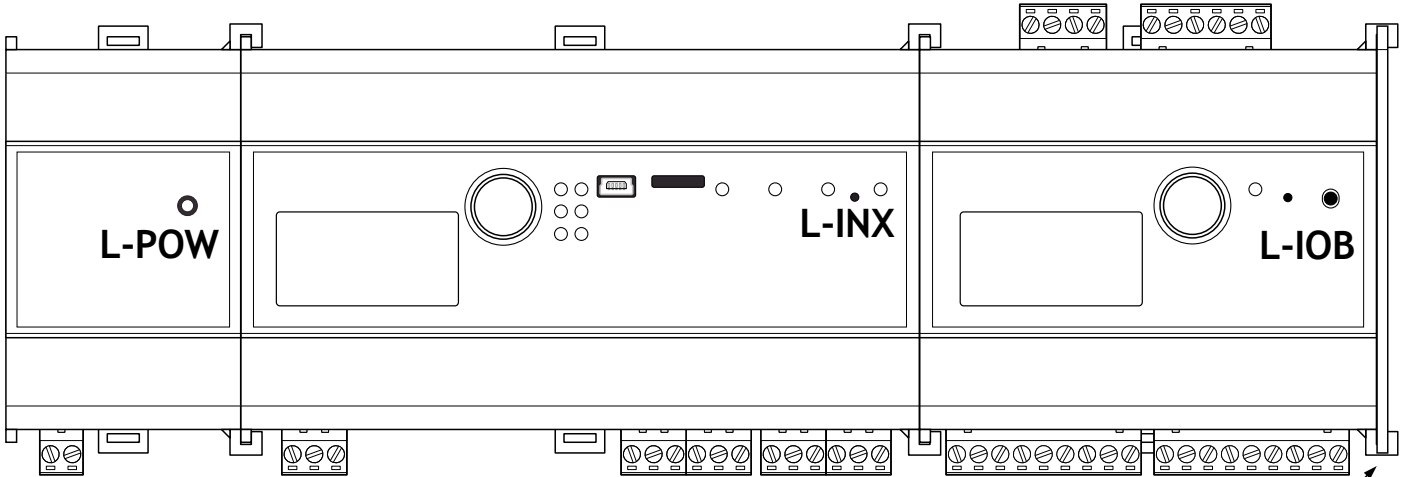


Install the cover on last device



Please update the firmware of the device first,
see www.loytec.com

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

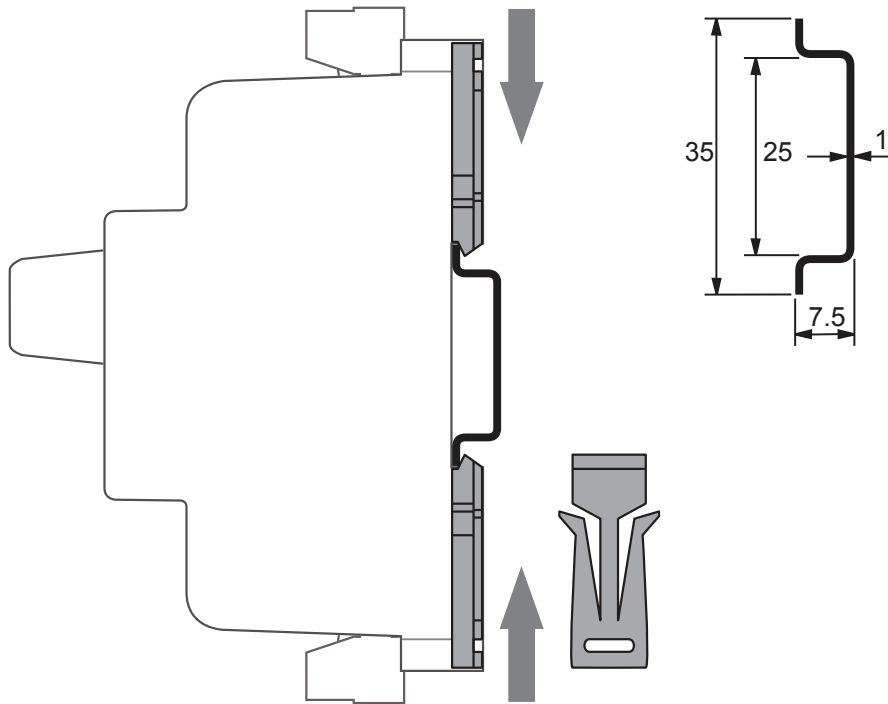

Node ID of the device

Serial number of the device

