

LOYREL-816 Relay Interface

Installation instructions

Instructions de montage


Montageanweisung



Montagevoorschrift

Istruzioni di montaggio


Instrucciones de montaje

Monteringsanvisning

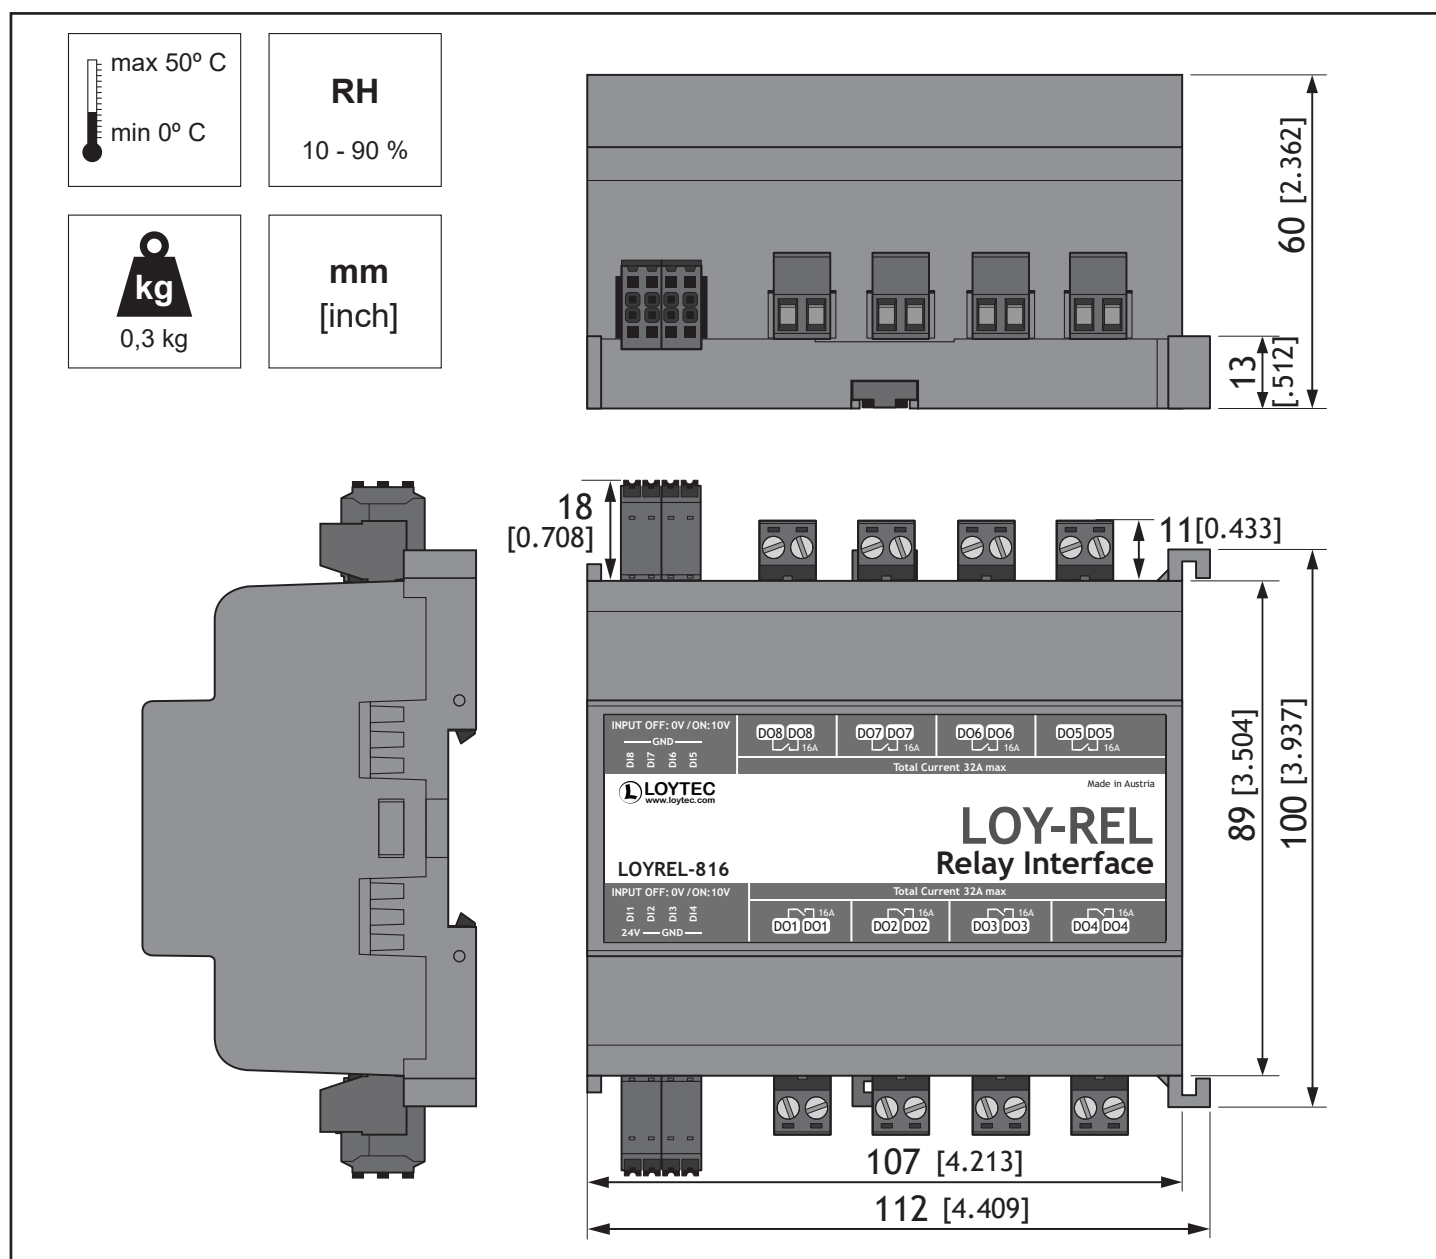

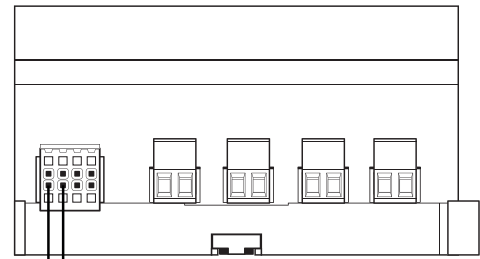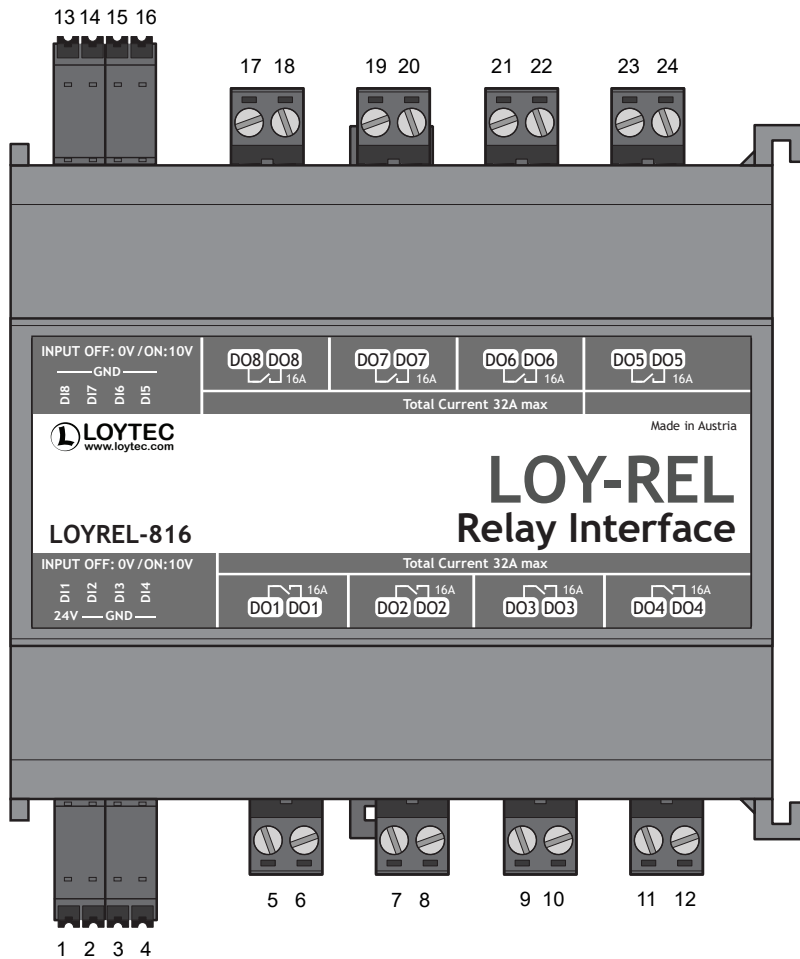


GND
+24V DC 0.4W/RELAY

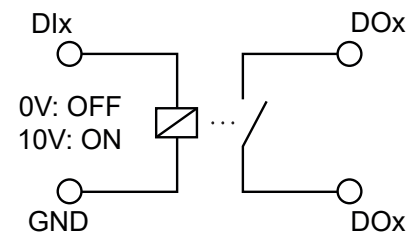



CONNECTORS		top	bottom
INPUT RELAY OFF: 0V RELAY ON: 10V	01	DI1	24V DC SUPPLY (3.2W)
	02	DI2	GND
	03	DI3	GND
	04	DI4	GND
DIGITAL OUTPUT RELAY 16A	05	Output DO1	
	06	Output DO1	
	07	Output DO2	
	08	Output DO2	
	09	Output DO3	
	10	Output DO3	
	11	Output DO4	
	12	Output DO4	

CONNECTORS		top	bottom
INPUT RELAY OFF: 0V RELAY ON: 10V	13	DI8	GND
	14	DI7	GND
	15	DI6	GND
	16	DI5	GND
DIGITAL OUTPUT RELAY 16A	17	Output DO8	
	18	Output DO8	
	19	Output DO7	
	20	Output DO7	
	21	Output DO6	
	22	Output DO6	
	23	Output DO5	
	24	Output DO5	

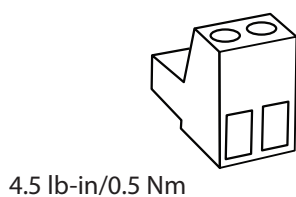


Weidmüller
BLZP 5.08/02/180

  0.2 - 2.5 mm²




Weidmüller
B2CF 3.50/04/180

 0.14 - 1.5 mm²
AWG26-AWG16



35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

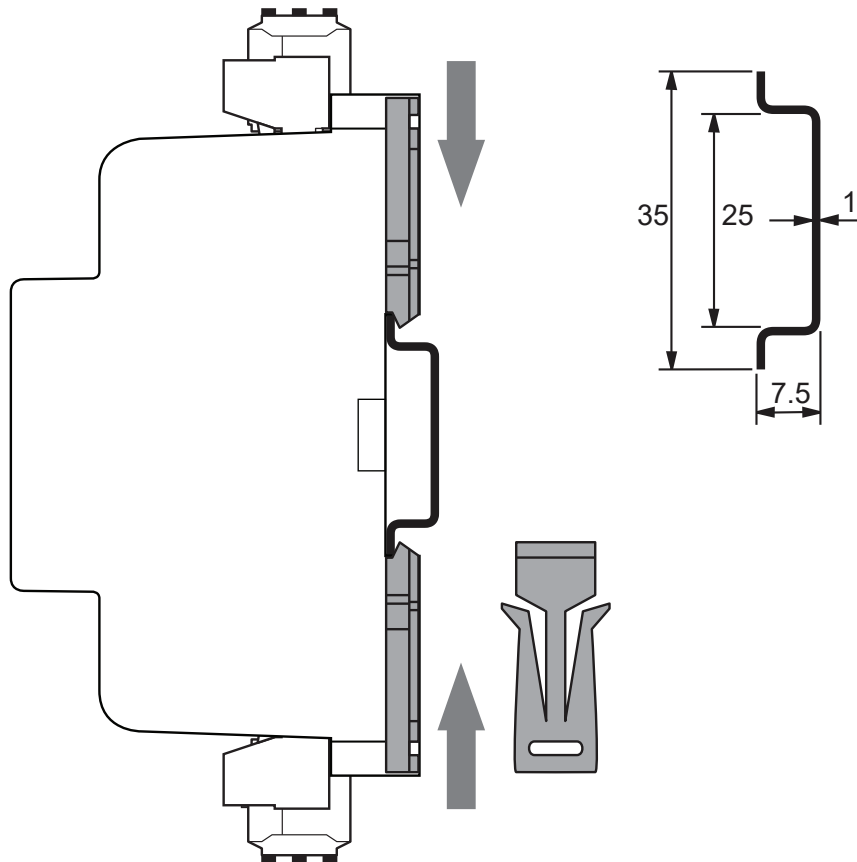


installation DIN rail 1.0

Device type

Date Code

Serial number of the device

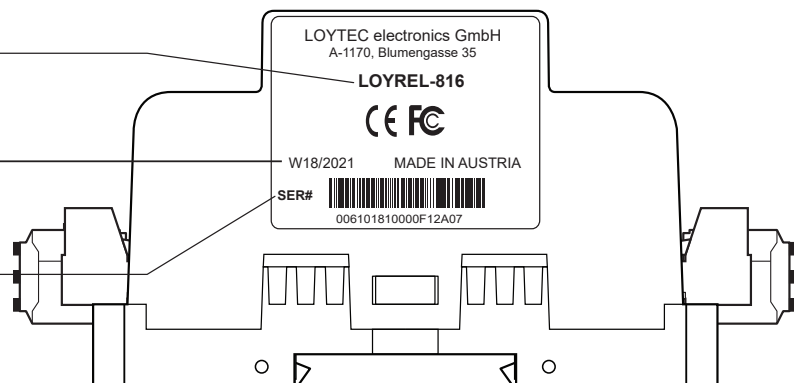

label 1.1