

LIOB-560 I/O Module

Installation instructions

Instructions de montage








Montageanweisung



Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

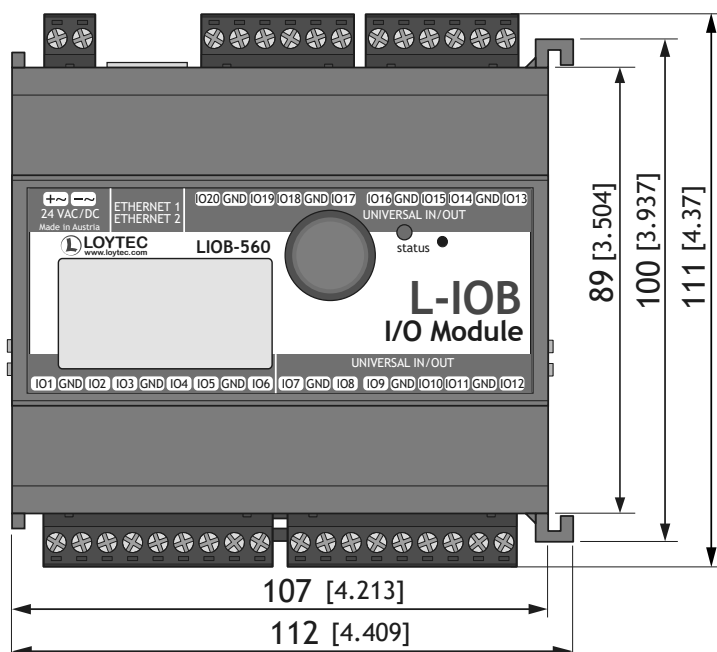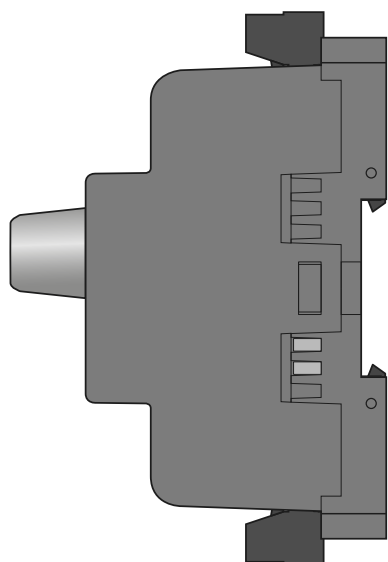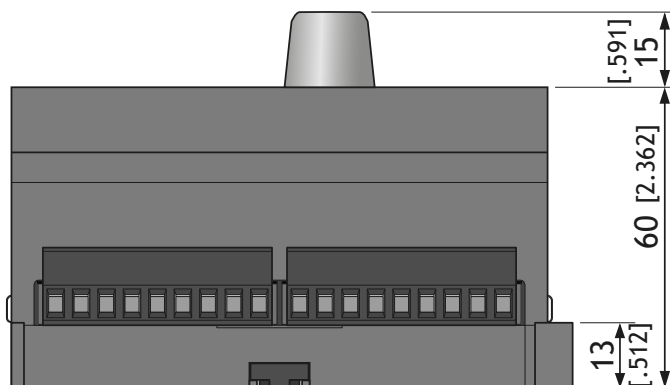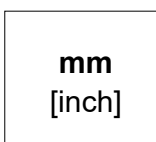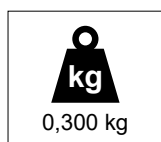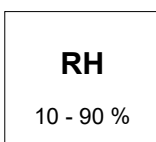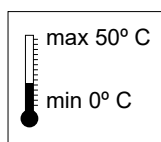

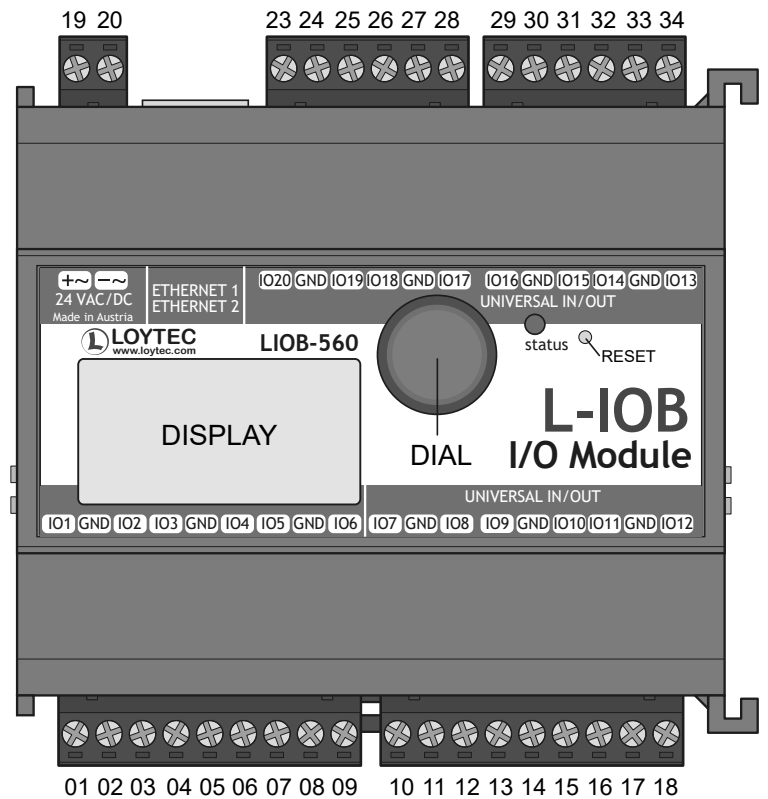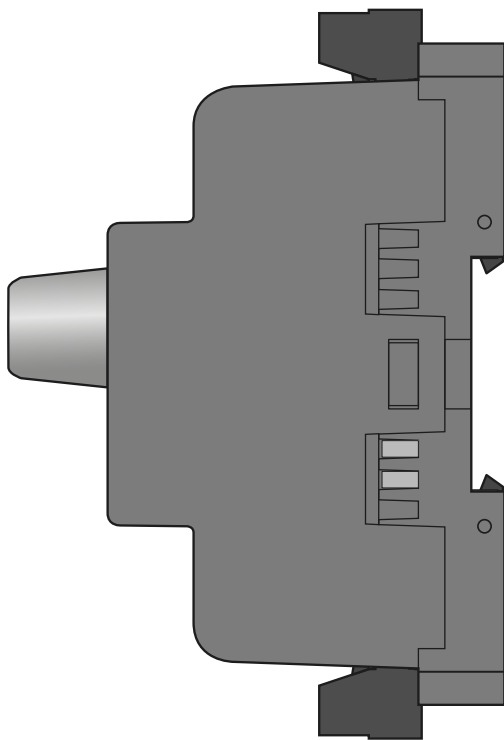

Buttons

RESET	Reset Button
DIAL	Turn-and-Push Dial

Connectors

UNIVERSAL IN / OUT	01	IO1 (U, I, R)
	02	GND
	03	IO2 (U, I, R)
	04	IO3 (U, I, R)
	05	GND
	06	IO4 (U, I, R)
	07	IO5 (U, I, R)
	08	GND
	09	IO6 (U, I, R)
	10	IO7 (U, I, R)
	11	GND
	12	IO8 (U, I, R)
	13	IO9 (U, I, R)
	14	GND
	15	IO10 (U, I, R)
	16	IO11 (U, I, R)
	17	GND
	18	IO12 (U, I, R)


U: 0-10V input or 0-10V output,
I: 4-20mA input,
R: resistance measurement

Connectors

POWER SUPPLY	19	Input 24 V PLUS or AC
	20	Input 24 V MINUS or AC Do NOT ground
UNIVERSAL IN / OUT	23	IO20 (U, I, R)
	24	GND
	25	IO19 (U, I, R)
	26	IO18 (U, I, R)
	27	GND
	28	IO17 (U, I, R)
	29	IO16 (U, I, R)
	30	GND
	31	IO15 (U, I, R)
	32	IO14 (U, I, R)
	33	GND
	34	IO13 (U, I, R)


Status LED

OFF	Unconfigured
GREEN	In Operation
ORANGE	In Manual / overwrite Mode
RED	Error
FLASHING	Traffic

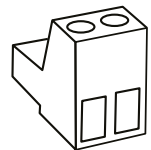

4.5 lb-in/0.5 Nm

 0.2 - 2.5 mm²



2 poles: Weidmüller
BLZP 5.08/02/180

6 poles: Weidmüller
BLZP 5.08/06/180

9 poles: Weidmüller
BLZP 5.08/09/180

License Notice: This product contains components covered by the GPL and LGPL.
Details on device Web UI or <http://loytec.com/os/>

Please update the firmware of the device first, see www.loytec.com/support/download

DHCP: ON
User: admin

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

