

LIOB-A4, LIOB-A5 Adapter

Installation instructions

Instructions de montage


Montageanweisung


Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

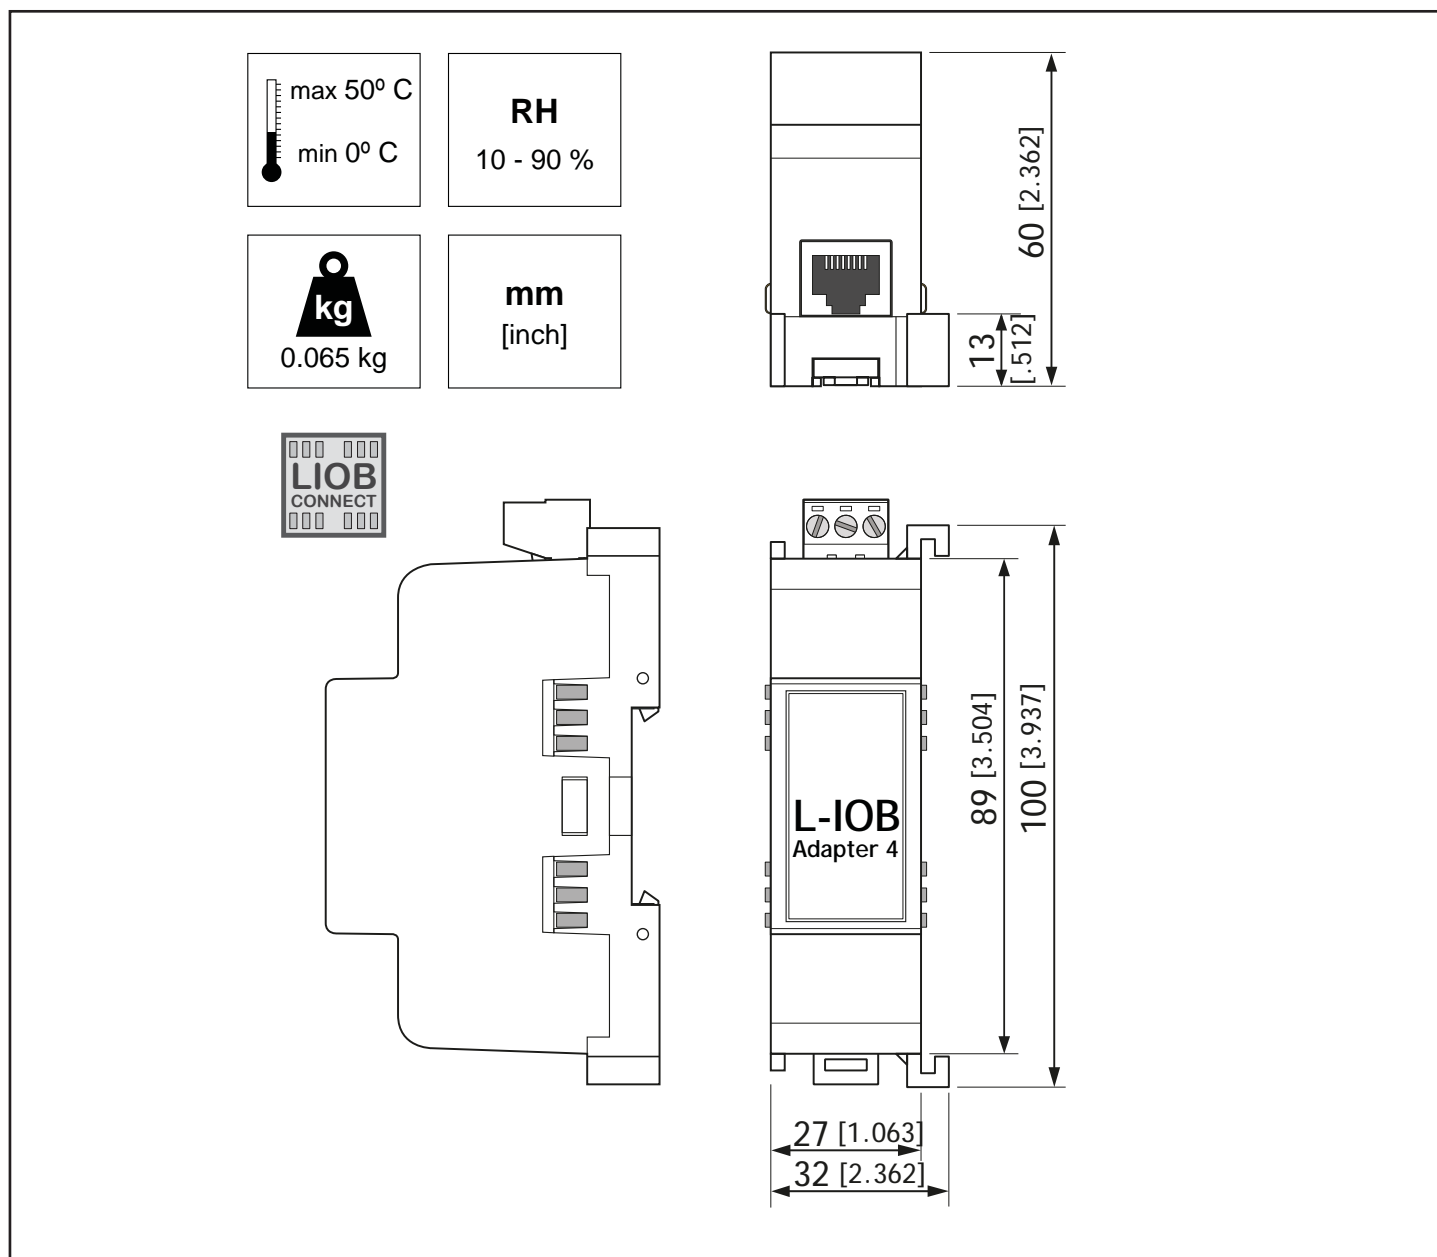


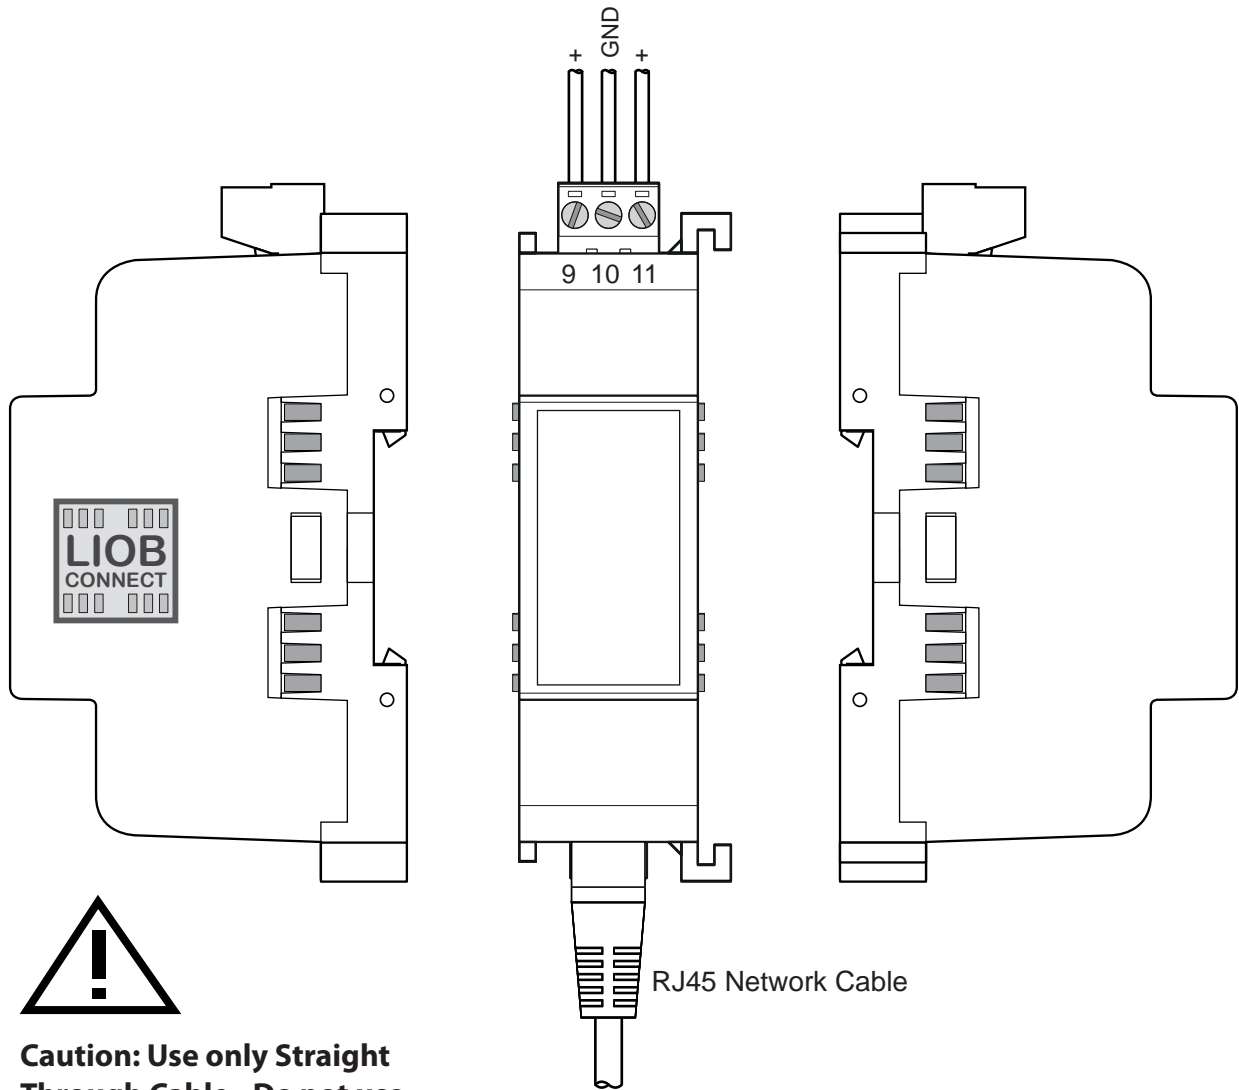

Caution: Use only Straight Through Cable - Do not use Crossover Cable for wiring!

Connectors LIOB-A4		
LIOB CONNECT IN/OUT	1	A
	2	B
	3	GND
via	4	SEL
RJ45 Network Cable	5	GND
	6	GND
	7	Input 24 V PLUS
	8	Input 24 V PLUS
POWER INPUT	9	Input 24 V PLUS
	10	GND
POWER OUTPUT max. 400mA	11	Output 24 V PLUS



Connectors LIOB-A5		
NC	9	not connected
POWER OUTPUT max. 400mA	10	Output GND
	11	Output 24 V PLUS
BUS TERMINATION		

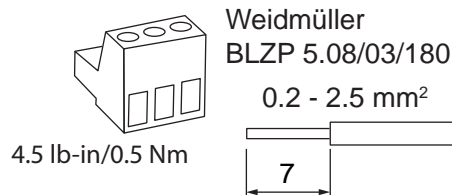

LIOB-A4/A5 schematics to extend the LIOB-Connect bus

Use standard RJ45 network cables (max. 50 m) to connect 2 LIOB-Connect lines.
On the last segment, the LIOB-Connect bus is terminated with the LIOB-A5.

LIOB-A4

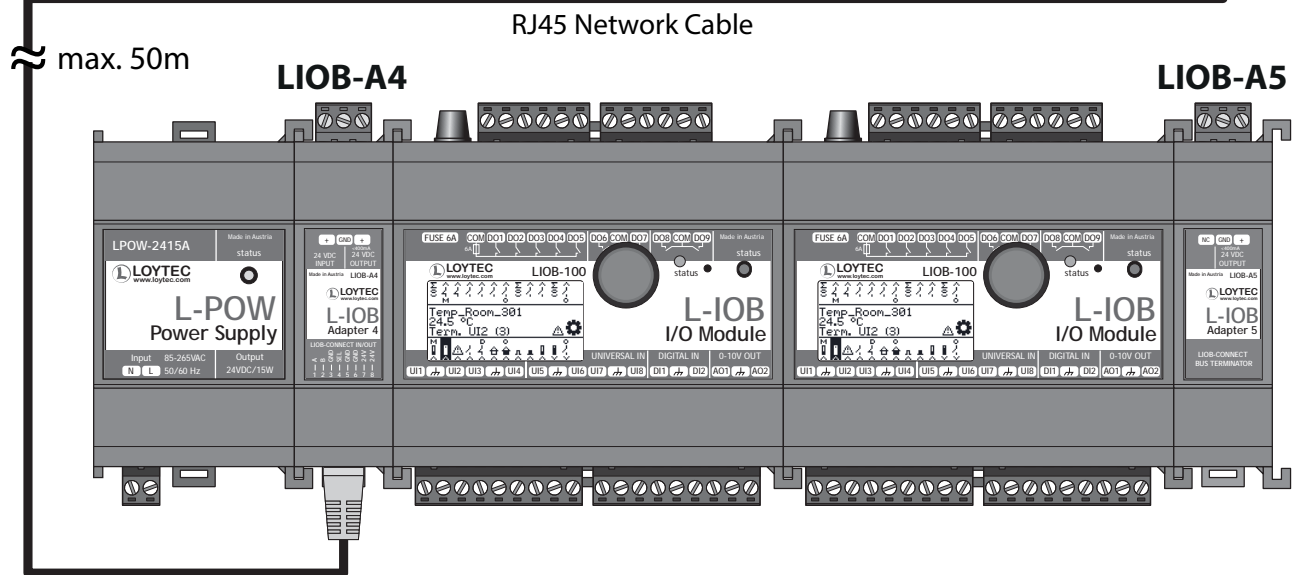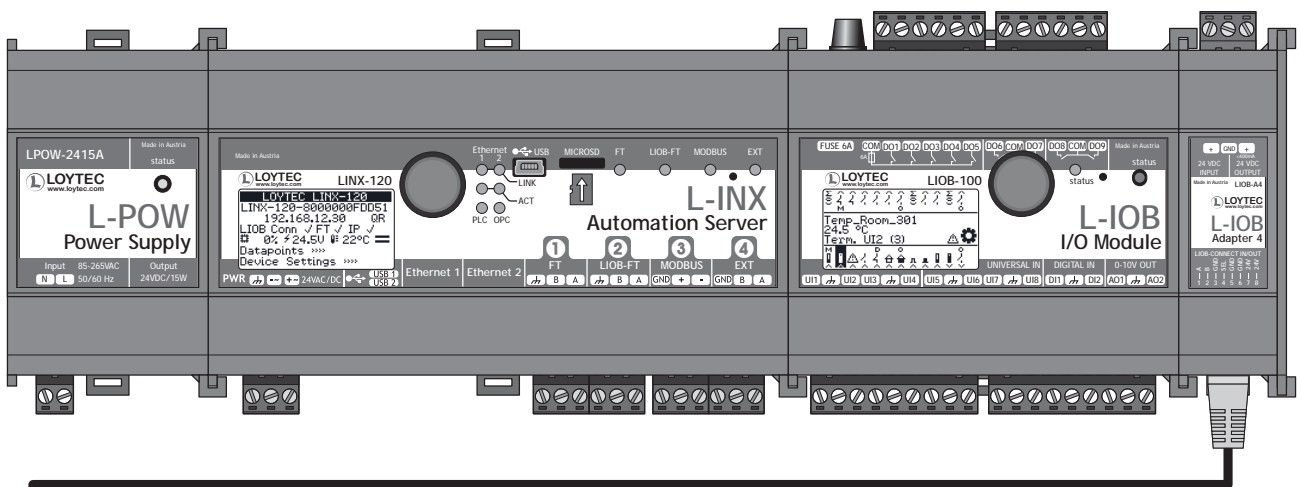

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

