

L-TRIAC16 Triac Interface

Installation instructions

Instructions de montage


Montageanweisung


Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje


Monteringsanvisning

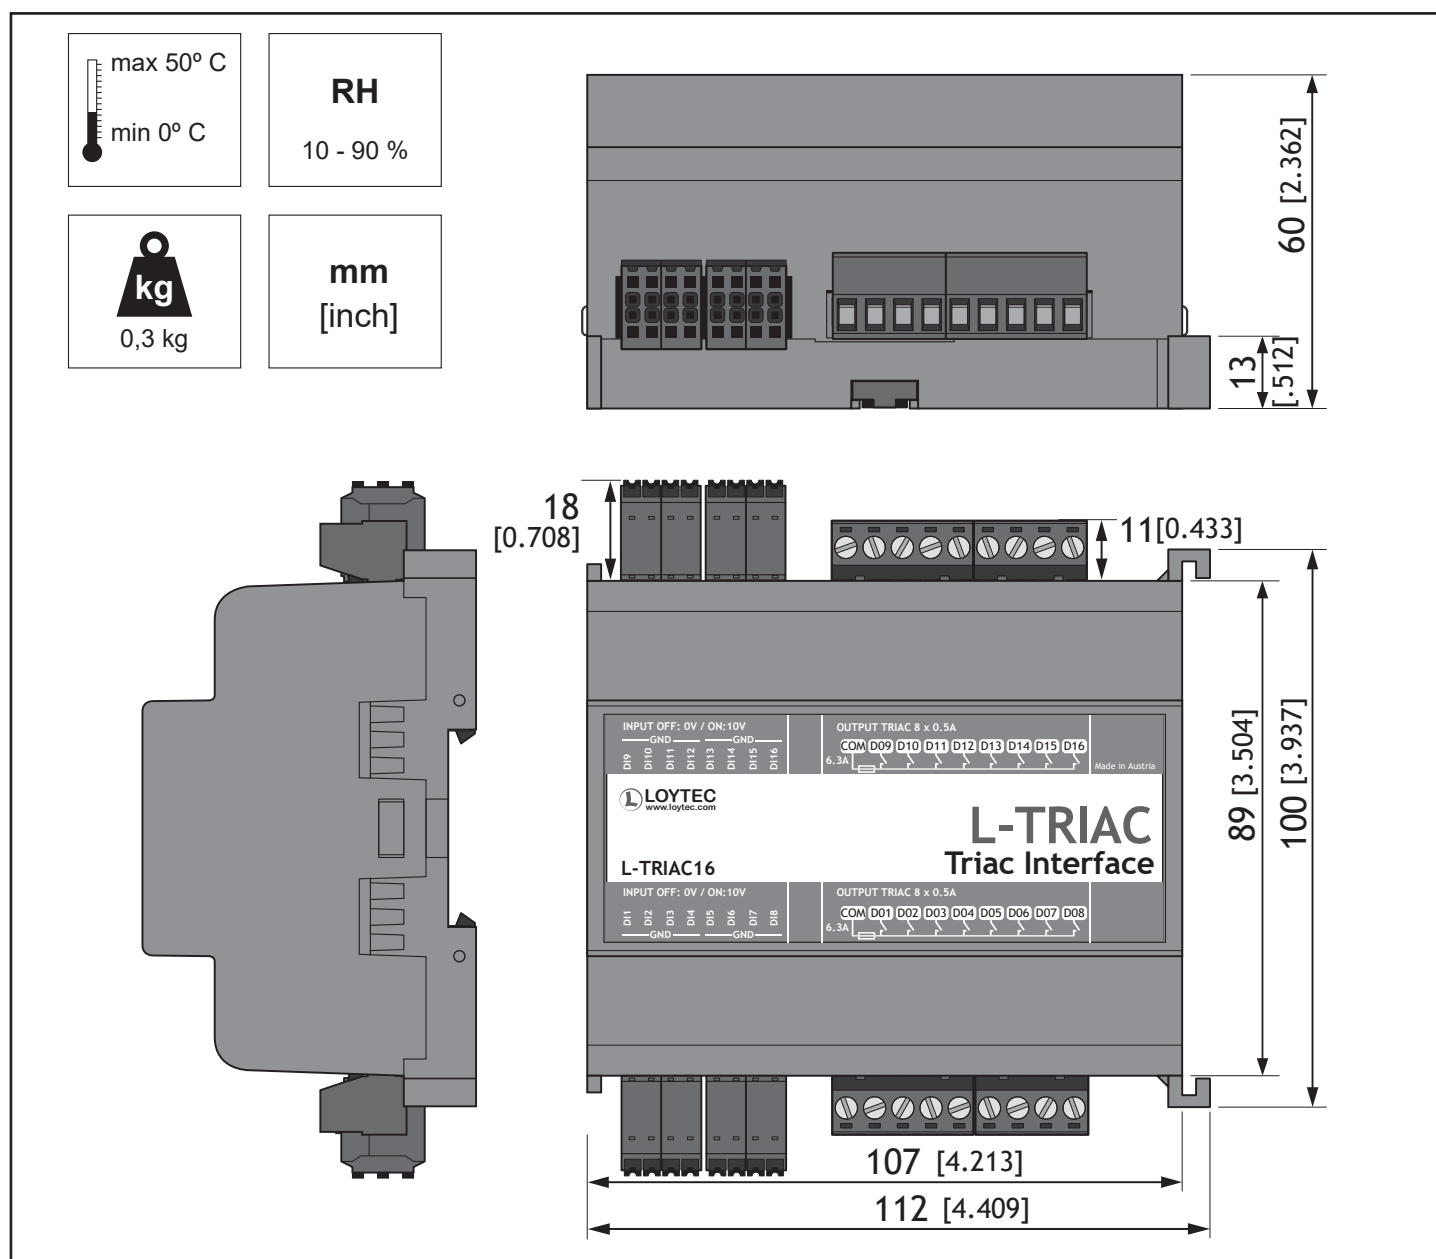

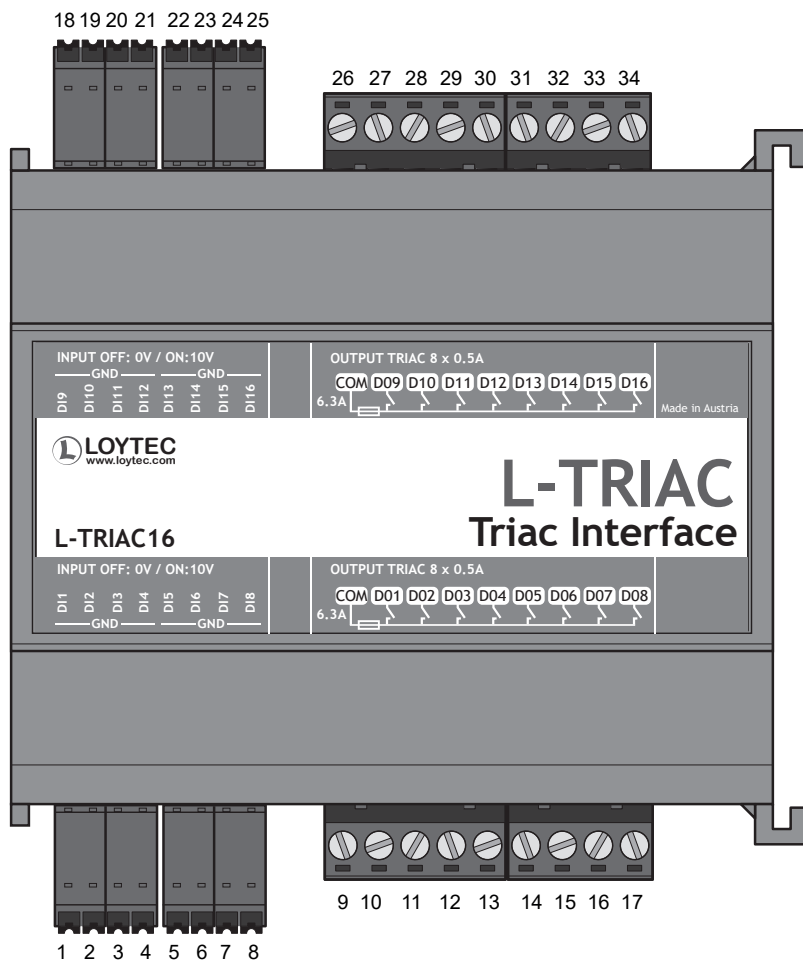


CONNECTORS		top	bottom
INPUT OFF: 0V / ON: 10V	01	DI1	GND
	02	DI2	GND
	03	DI3	GND
	04	DI4	GND
	05	DI5	GND
	06	DI6	GND
	07	DI7	GND
	08	DI8	GND
OUTPUT TRIAC 8 x 0.5A 24 - 240 VAC 50/60 Hz	09	Output Common	
	10	Output D01	
	11	Output D02	
	12	Output D03	
	13	Output D04	
	14	Output D05	
	15	Output D06	
	16	Output D07	
	17	Output D08	

CONNECTORS		top	bottom
INPUT OFF: 0V / ON: 10V	18	DI9	GND
	19	DI10	GND
	20	DI11	GND
	21	DI12	GND
	22	DI13	GND
	23	DI14	GND
	24	DI15	GND
	25	DI16	GND
OUTPUT TRIAC 8 x 0.5A 24 - 240 VAC 50/60 Hz	26	Output Common	
	27	Output D09	
	28	Output D10	
	29	Output D11	
	30	Output D12	
	31	Output D13	
	32	Output D14	
	33	Output D15	
	34	Output D16	

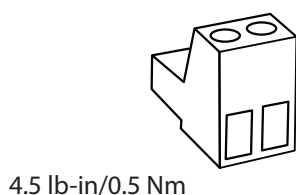

Weidmüller
BLZP 5.08/04/180
BLZP 5.08/05/180

 0.2 - 2.5 mm²




Weidmüller
B2CF 3.50/04/180

0.14 - 1.5 mm²
AWG26-AWG16



35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

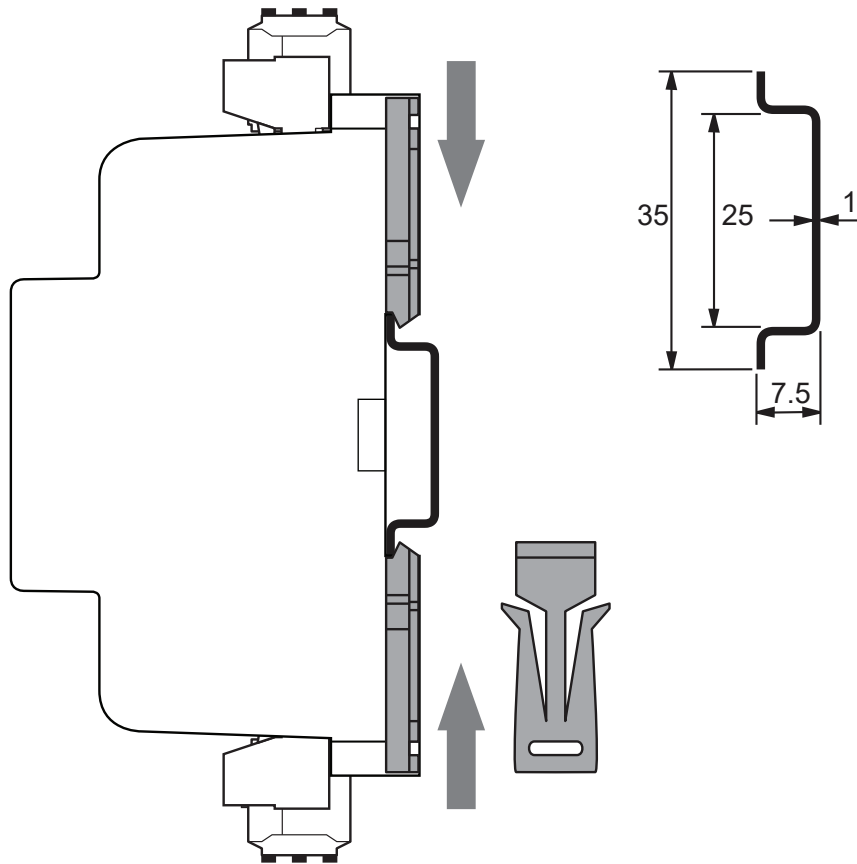


installation DIN rail 1.0

Device type

Date Code

Serial number of the device

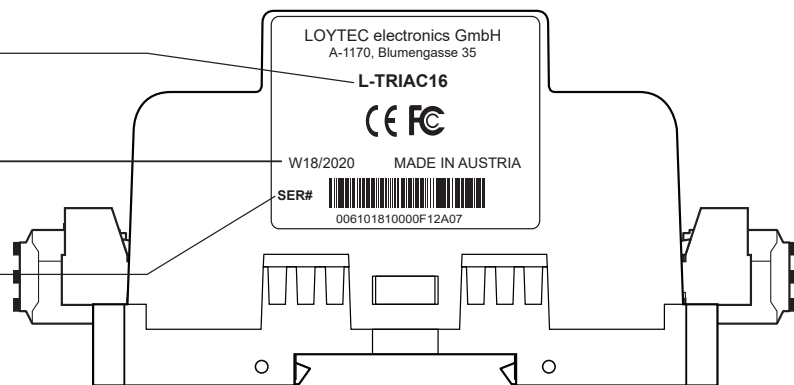

label 1.1