

LINX-154 Automation Server

Installation instructions

Instructions de montage


Montageanweisung


Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

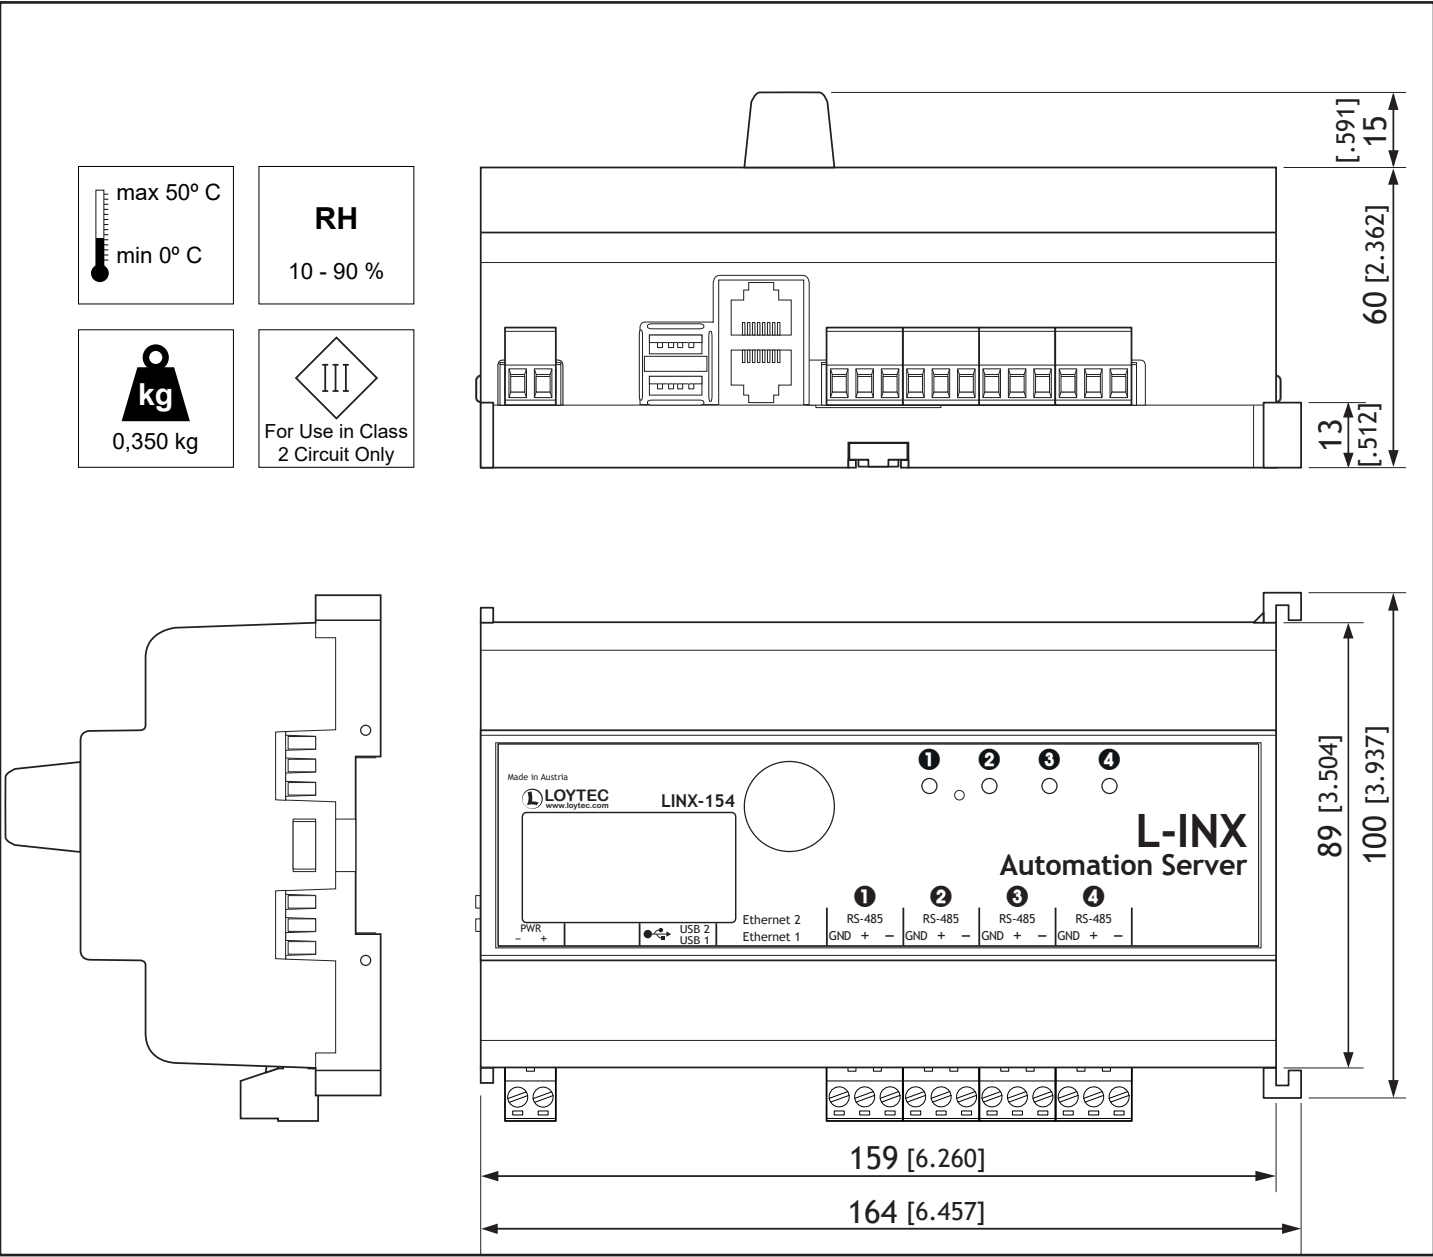

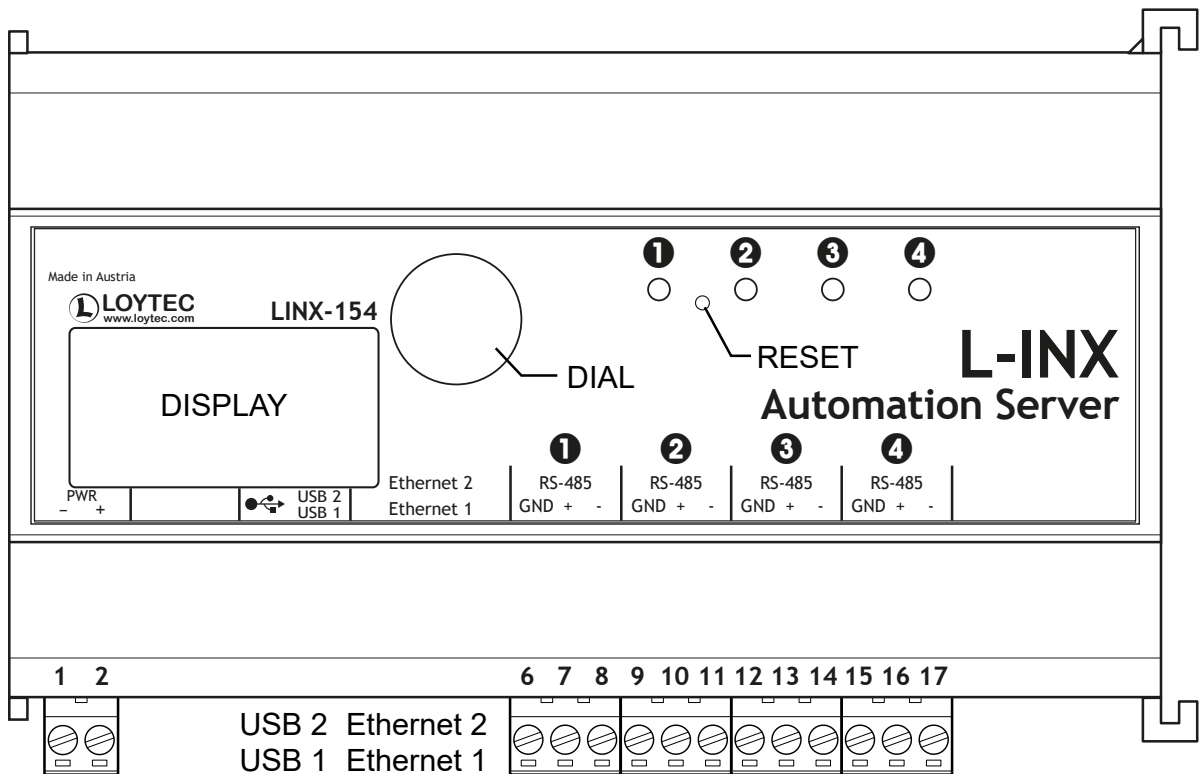

Connectors


POWER 24 V DC/ VAC SELV	1	Power supply input -
	2	Power supply input +
		⚠ Input + must NOT be connected to EARTH GND
RS-485 PORT 1	6	GND
	7	+
	8	-
RS-485 PORT 2	9	GND
	10	+
	11	-
RS-485 PORT 3	12	GND
	13	+
	14	-
RS-485 PORT 4	15	GND
	16	+
	17	-

Connectors

USB1 USB2	USB-A USB-A	USB Device USB Device
Ethernet1 Ethernet2	RJ45 RJ45	10/100Base-T 10/100Base-T

Buttons

RESET DIAL	Reset Turn-and-Push Dial
---------------	-----------------------------

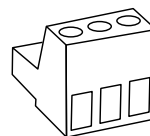



Weidmüller
BLZP 5.08/03/180
BLZP 5.08/02/180

4.5 lb-in/0.5 Nm

Weidmüller
BL 5.08

 0.2 - 2.5 mm²



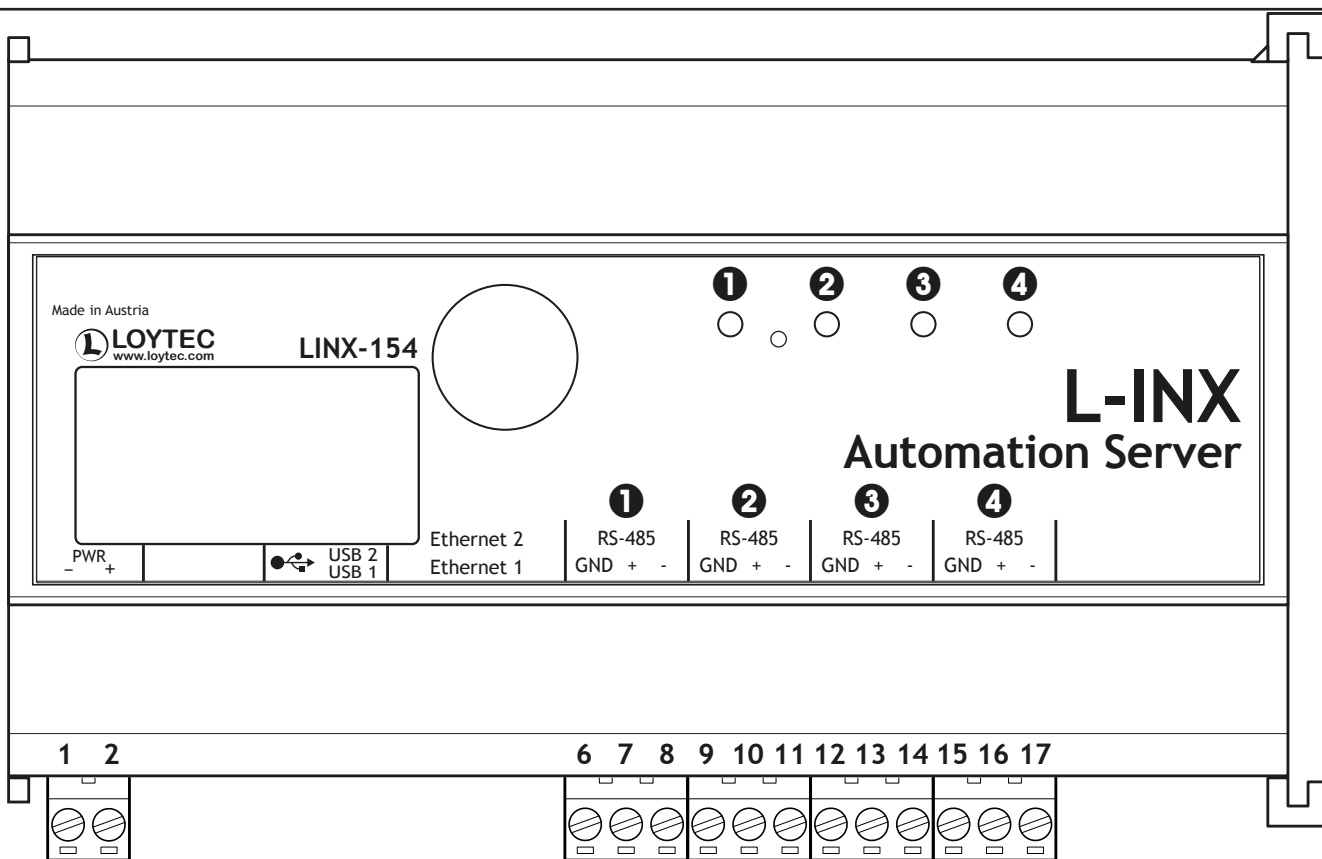

STATUS LEDs


RS-485 MS/TP		
	GREEN flashing fast	Token ok, traffic
	ORANGE flicker	Single master, traffic
	RED permanent	Token lost, cable damage
	RED flashing fast	Communication errors

Please update the firmware of the device first,
see www.loytec.com

License Notice: This product contains components covered by the GPL and LGPL.
Details on device Web UI or <http://loytec.com/os/>

DHCP enabled
User: admin

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

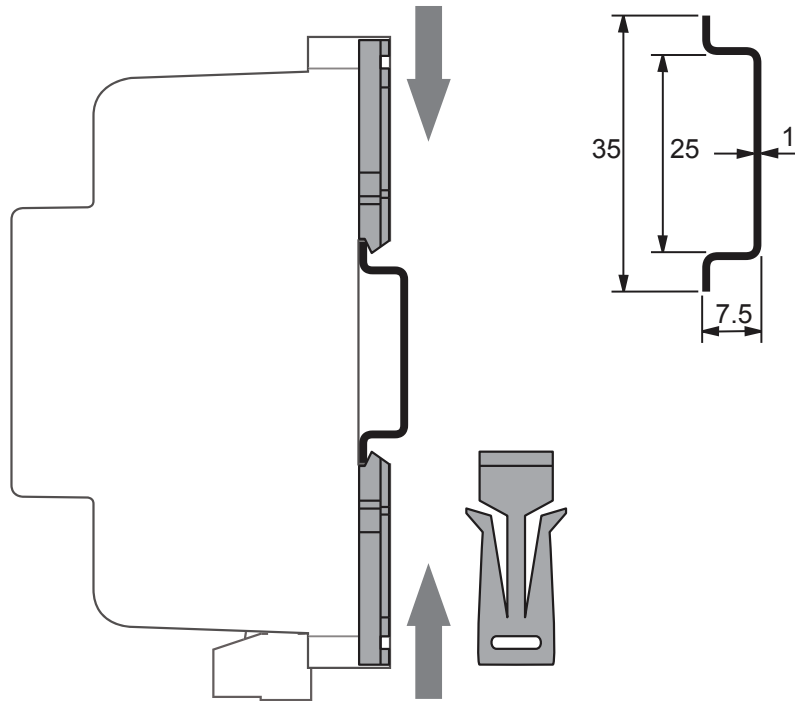

Node ID of CEA-709 Port 1

Virtual (Node) ID of CEA-852 port (Ethernet)

MAC address of CEA-852 Ethernet port

Serial number of the device

