

LIOB-591 I/O Controller

Installation instructions

Instructions de montage


Montageanweisung


Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

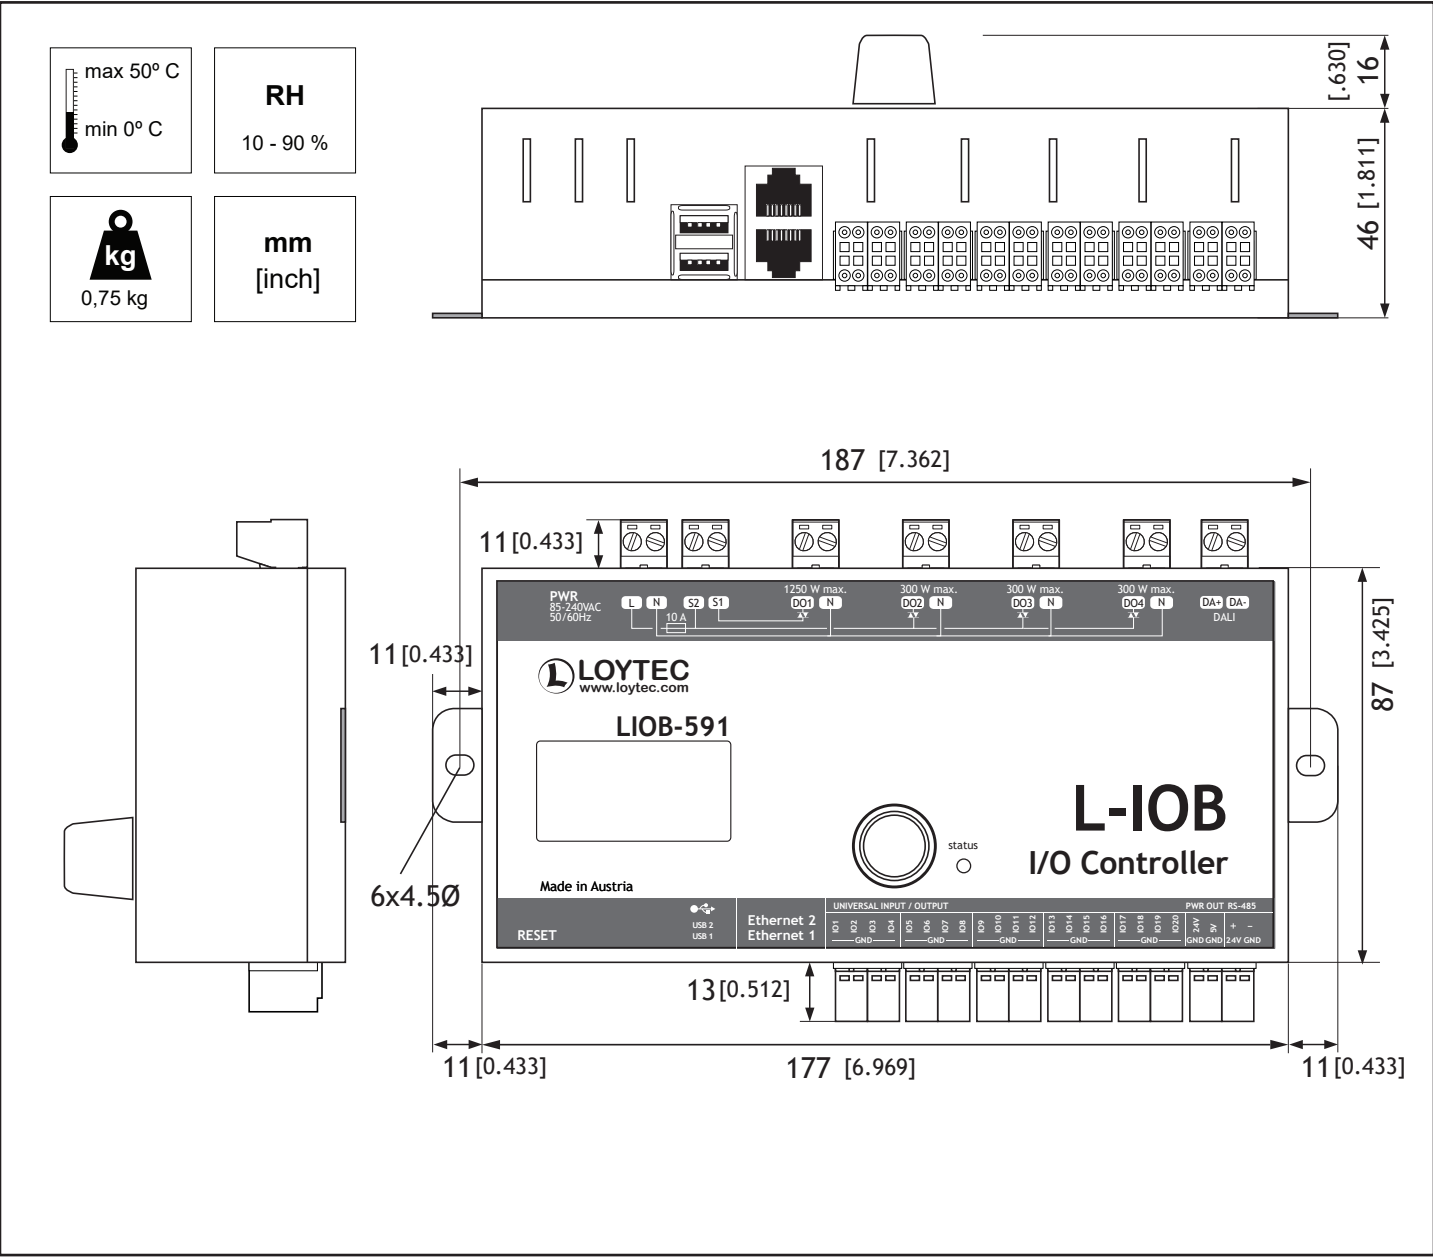

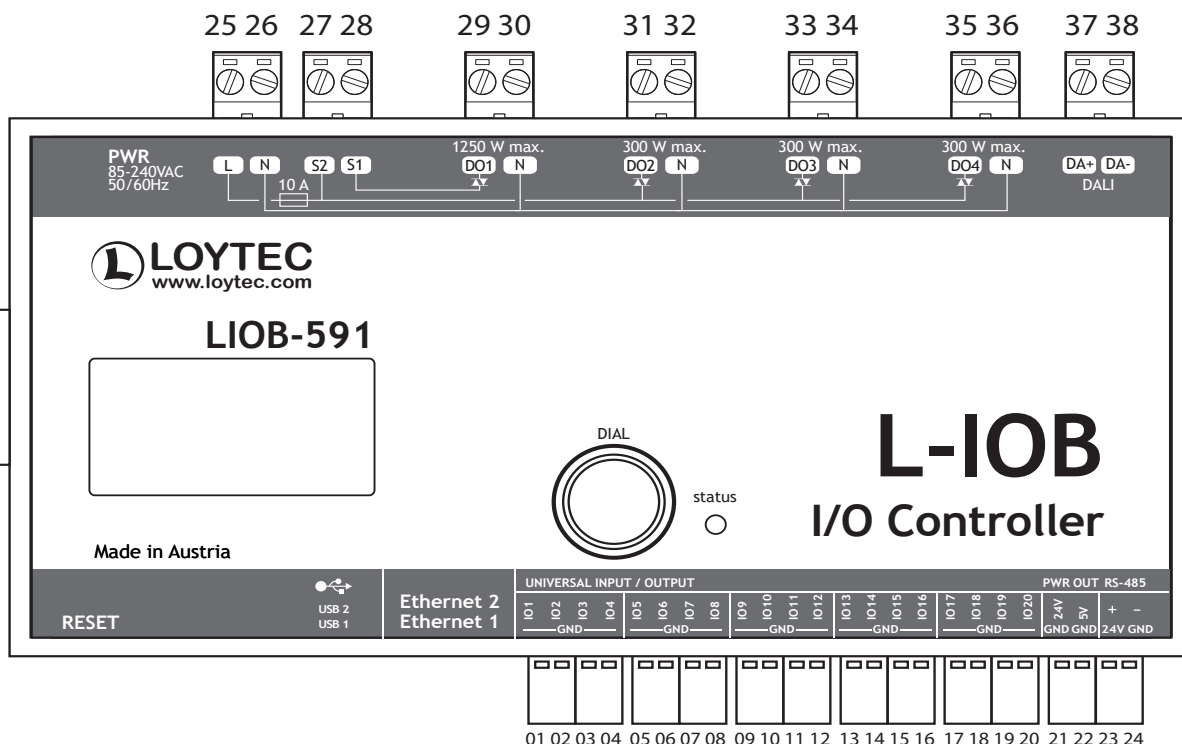

BUTTONS	
RESET	Reset Button
DIAL	Turn-and-Push Dial

STATUS LED	
OFF	Unconfigured
GREEN	In Operation
ORANGE	In Manual / Override mode
RED	Error
FLASHING	Traffic


CONNECTORS	top		bottom
UNIVERSAL INPUT / OUTPUT	01	IO1 (U,I,R)	GND
	02	IO2 (U,I,R, RPM)	GND
	03	IO3 (U,I,R)	GND
	04	IO4 (U,I,R, RPM)	GND
	05	IO5 (U,I,R)	GND
	06	IO6 (U,I,R)	GND
	07	IO7 (U,I,R)	GND
	08	IO8 (U,I,R)	GND
	09	IO9 (U)	GND
	10	IO10 (U)	GND
	11	IO11 (U)	GND
	12	IO12 (U)	GND
	13	IO13 (U)	GND
	14	IO14 (U)	GND
	15	IO15 (U)	GND
	16	IO16 (U)	GND
	17	IO17 (U)	GND
	18	IO18 (U)	GND
	19	IO19 (U)	GND
	20	IO20 (U)	GND
PWR OUT	21	24V (100 mA)	GND
	22	5V (100 mA)	GND
RS-485	23	+	24V (50 mA)
	24	-	GND

PWR in	25	L
	26	N
Thermal Switch	27	S2
	28	S1
TRIAC	29	DO1
	30	N
	31	DO2
	32	N
	33	DO3
	34	N
	35	DO4
	36	N
DALI	37	DA+
	38	DA-


Please update the firmware of the device first, see www.loytec.com/support/download

DHCP: ON
User: admin

2 poles:
Weidmüller BLZP 5.08/02/180

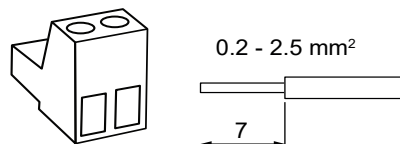

4.5 lb-in/0.5 Nm
Weidmüller B2L 3.50/04/180

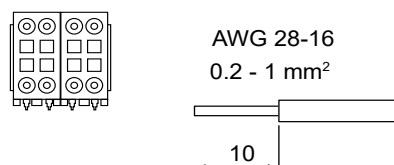

U: 0-10V input or 0-10V output, I: 4-20 mA input, R: resistance measurement, RPM: fan speed input
License Notice: This product contains components covered by the GPL and LGPL. Details on device Web UI or <http://loytec.com/os/>

