

LRS232-802 USB to RS232 Interface

Installation instructions

Instructions de montage

Montageanweisung

Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning




max 50° C
min 0° C

RH
10 - 90 %



kg
0.140 kg


mm
[inch]

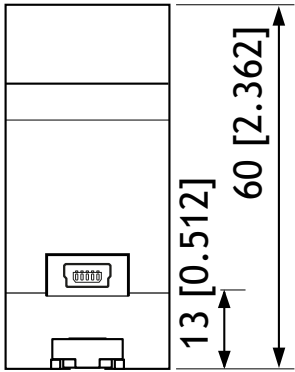


USB mini Socket	Mini-USB B
-----------------	------------


	top	bottom
01	TX1	GND
02	RX1	GND
03	TX2	GND
04	RX2	GND

 Weidmüller B2L 3.50/04/180



AWG 28-18
0.14 - 1 mm²

 

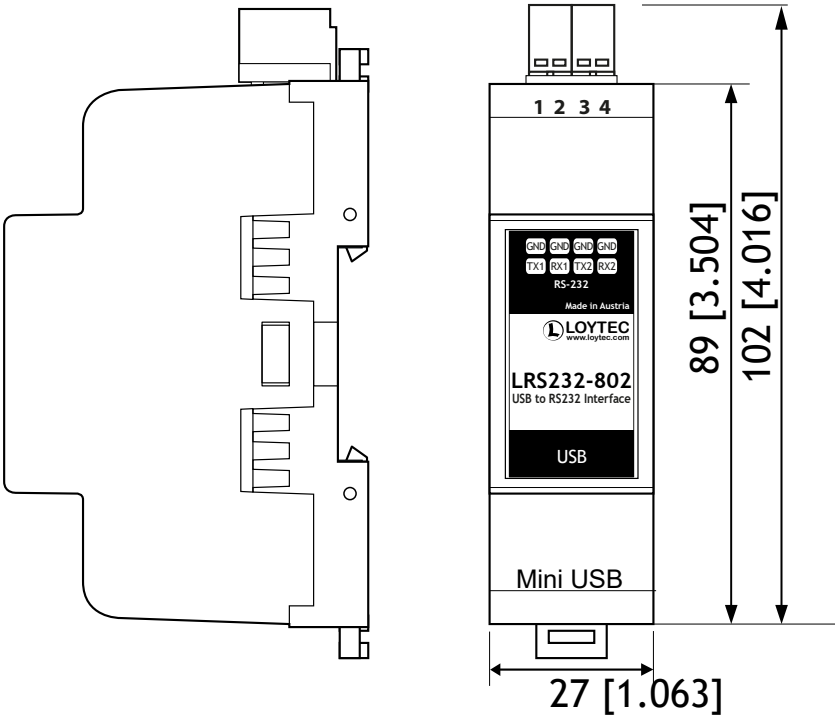

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

