

LROC-800 Room Controller

Installation instructions

Instructions de montage


Istruzioni di montaggio

Montageanweisung


Instrucciones de montaje

Montagevoorschrift

Monteringsanvisning

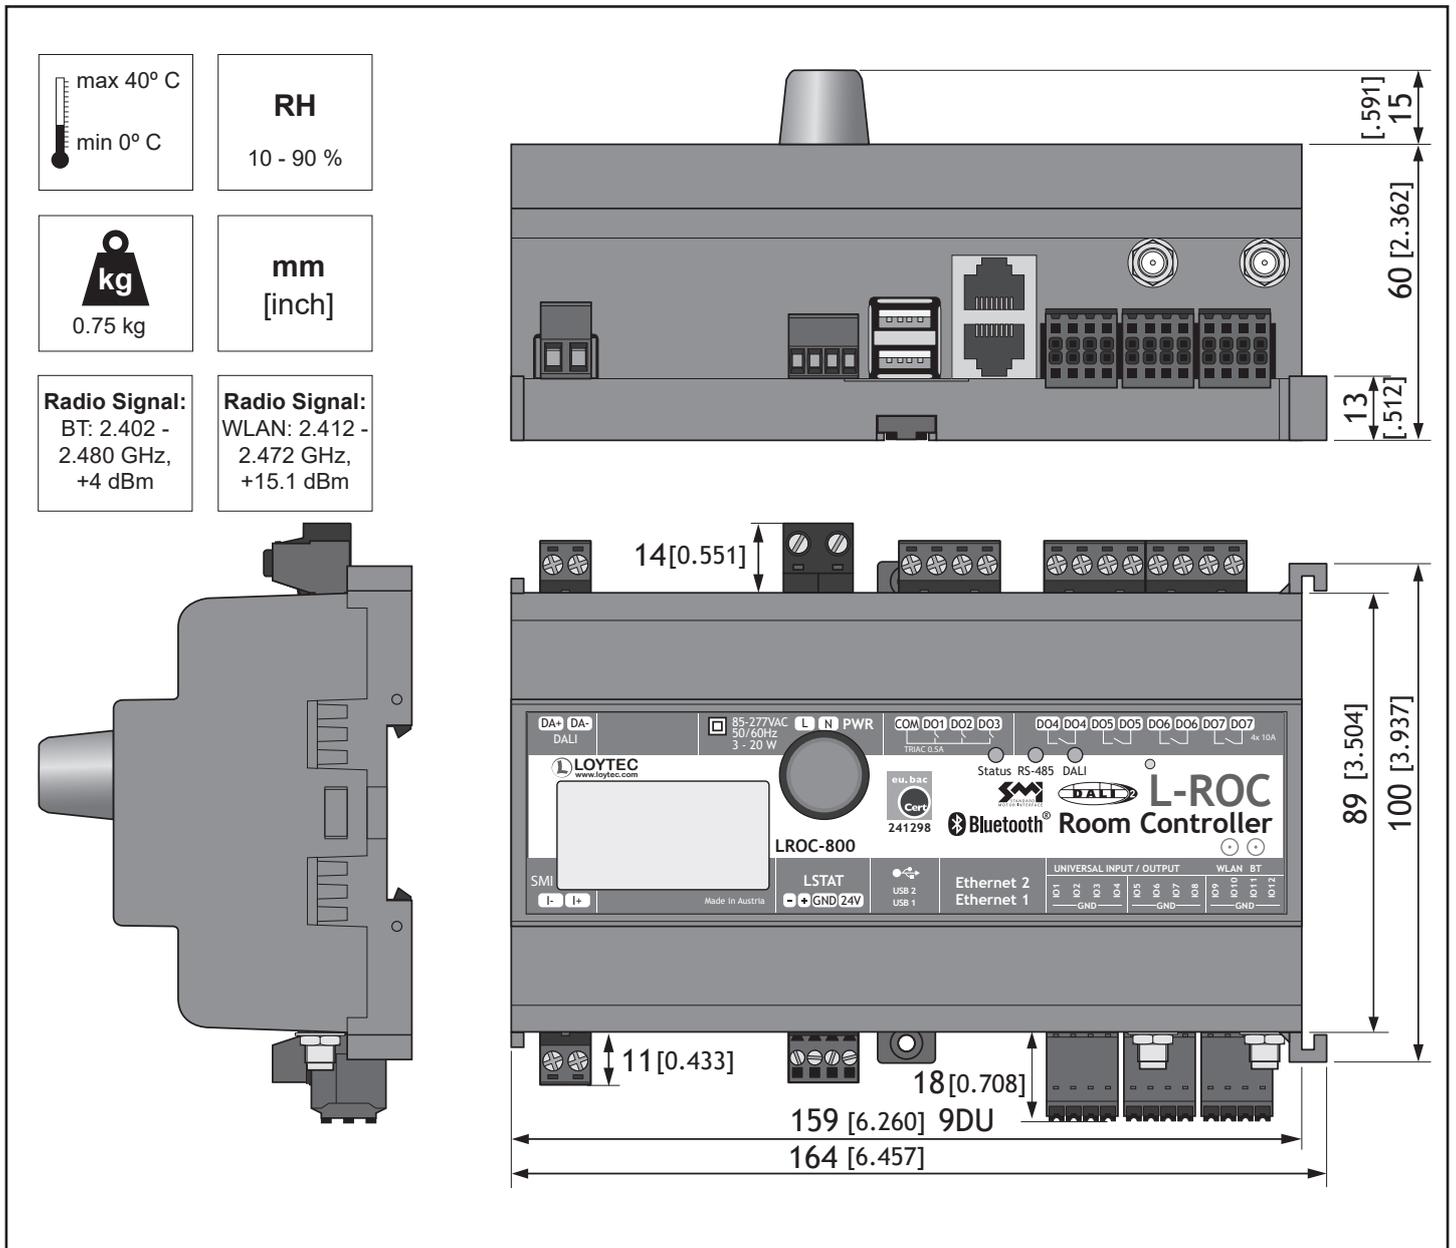

The device must only be operated with the provided antenna(s).

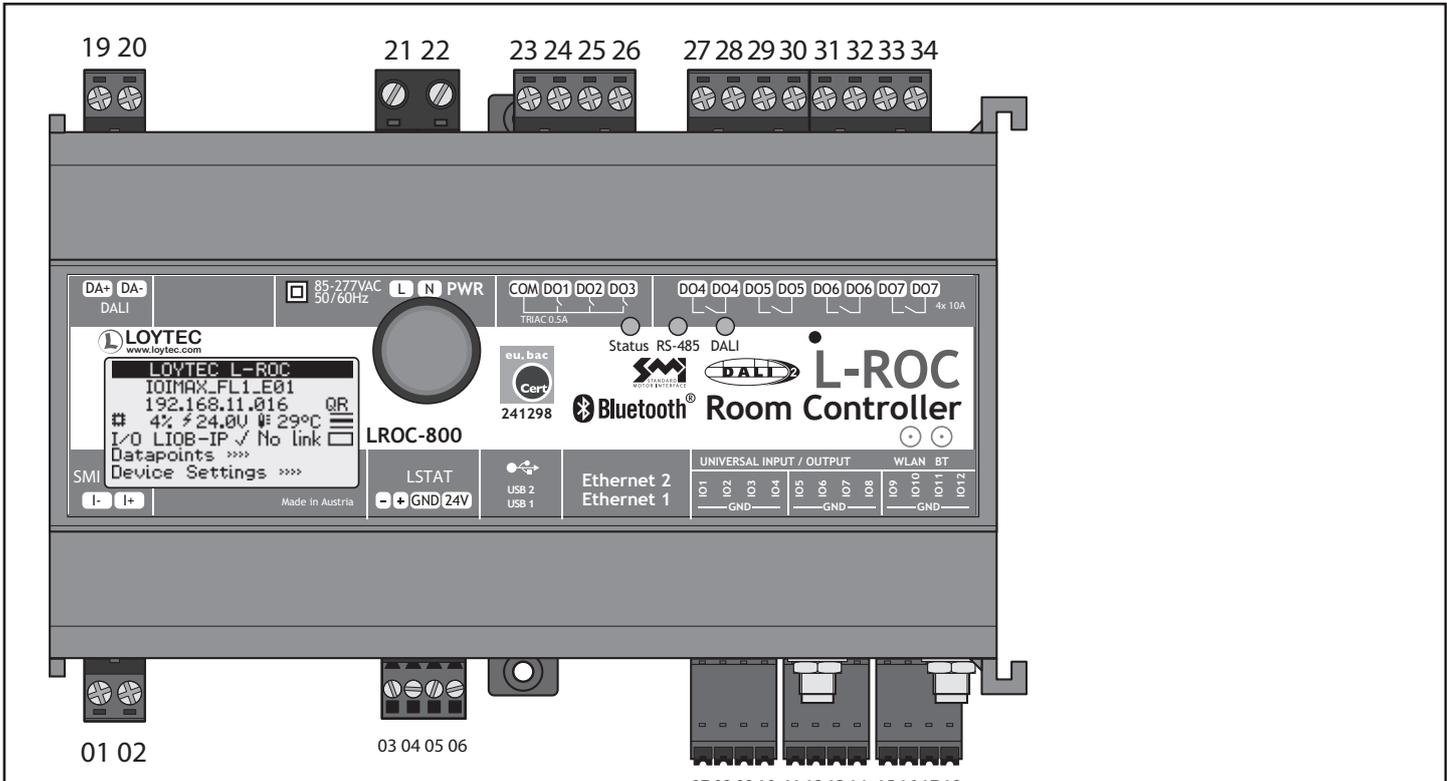

BUTTONS

RESET	Reset Button
DIAL	Turn-and-Push Dial

STATUS LED

OFF	Unconfigured
GREEN	In Operation
ORANGE	In Manual / Override mode
RED	Error
FLASHING	Traffic

CONNECTORS

SMI (high voltage)	01	I -
	02	I +
L-STAT (RS-485)	03	-
	04	+
	05	GND
	06	24V (50mA)
UNIVERSAL INPUT / OUTPUT	TOP	
	07	IO1 (U,R)
	08	IO2 (U,R)
	09	IO3 (U,R)
	10	IO4 (U,R)
	11	IO5 (U,R)
	12	IO6 (U,R)
	13	IO7 (U,R)
	14	IO8 (U,R)
	15	IO9 (U,R)
	16	IO10 (U,R)
	17	IO11 (U,R)
18	IO12 (U,R)	
DALI	19	DA+
	20	DA-
Power Input 85-277 VAC 50 - 60Hz	21	L
	22	N




OUTPUT TRIAC 0.5A	23	Output Common
	24	Output DO1
	25	Output DO2
	26	Output DO3
DIGITAL OUTPUT RELAY 4x 10A	27	Output DO4
	28	Output DO4
	29	Output DO5
	30	Output DO5
	31	Output DO6
	32	Output DO6
	33	Output DO7
	34	Output DO7

Please update the firmware of the device first, see www.loytec.com/support/download


DHCP: ON
User: admin

2 poles:
Weidmüller BLZP 5.08/02/180
Sauro CIF020070N



4 poles:
Weidmüller BLZP 5.08/04/180
Weidmüller BL 3.50/04/180 SN OR BX
Weidmüller B2CF 3.50/04/180

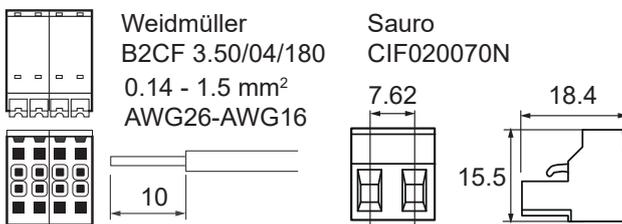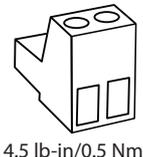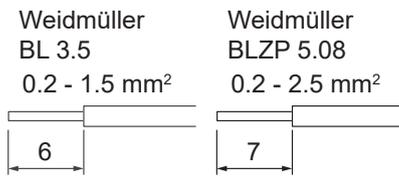

U: 0-10V input or 0-10V output, I: 4-20 mA input, R: resistance measurement
License Notice: This product contains components covered by the GPL and LGPL.
Details on device Web UI or <http://loytec.com/os/>

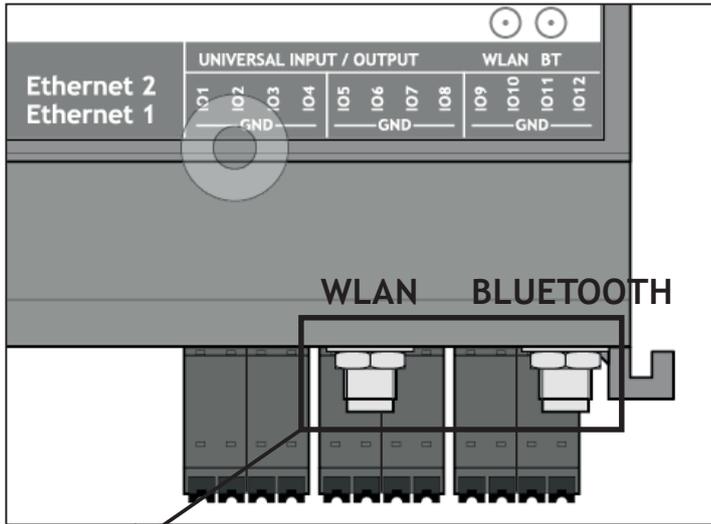

Antennas

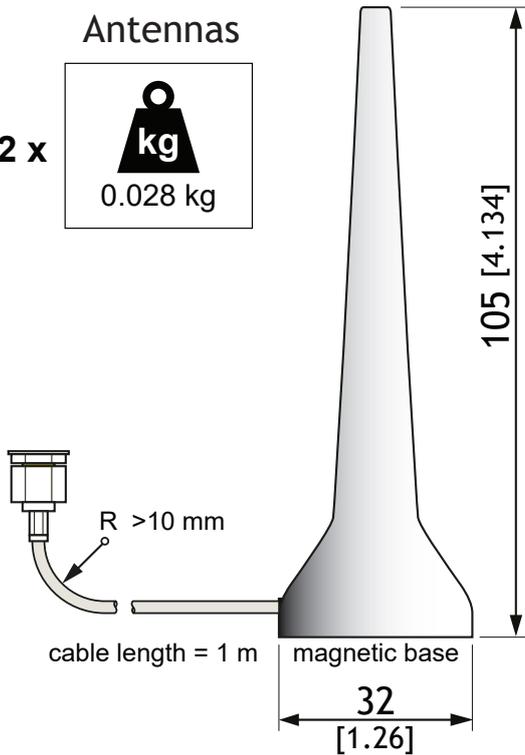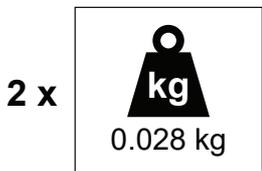

2x Antenna 2.4 GHz
Order Number: 61006601

Date Code

LOYTEC electronics GmbH
LROC-800
CE FC
W14/2023 MADE IN AUSTRIA
SER# 029302-000AB004D687

Serial number of the device

label 1.4

Document 88094702 Web edition
05/2025
Printed in Austria
Data is subject to change

LOYTEC
A Delta Group Company
<http://www.loytec.com>
support@loytec.com