L-Control^{XP} EIA-709/IP Controller

Installation instructions

Instructions de montage

Montageanweisung

Montagevoorschrift

Instruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

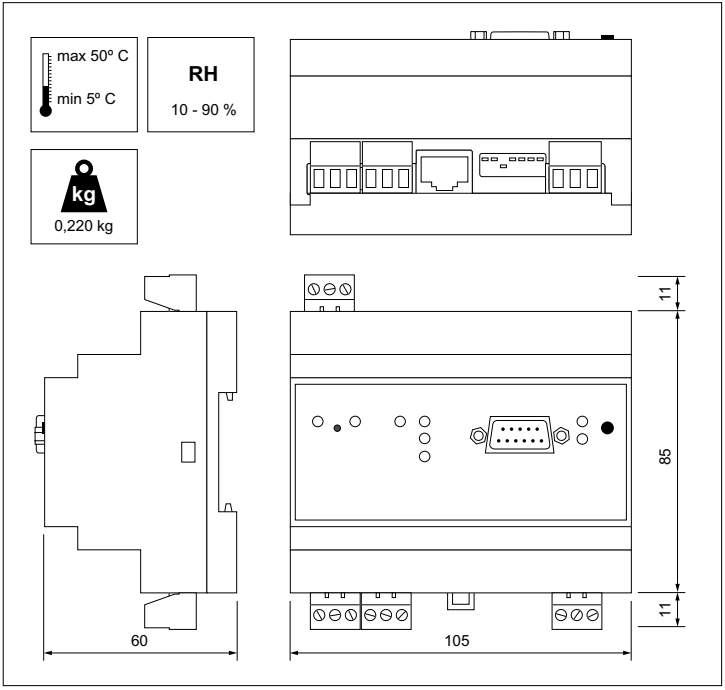

LOYTEC

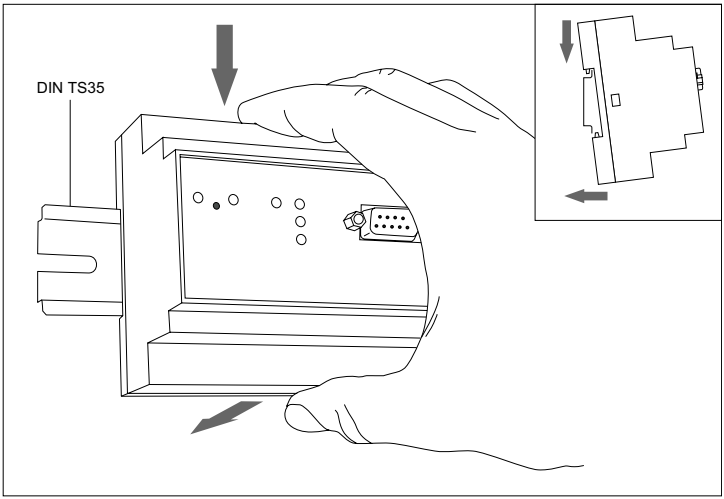
DIN TS35

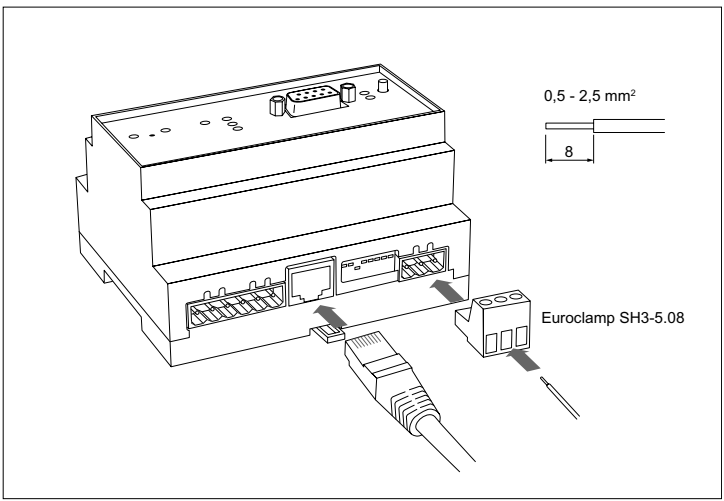
0,5 - 2,5 mm²
8
Euroclamp SH3-5.08

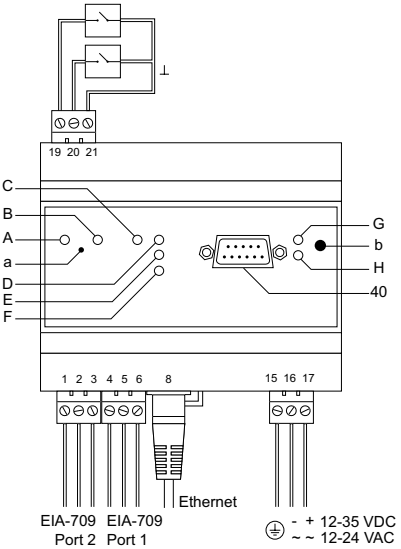

Status LEDs		
A	GREEN flashing fast	Traffic on port 1
	GREEN flashing at 1 Hz	Port not commissioned
	RED permanent	Port 1 damaged
	RED flashing fast	Traffic overload on port 1
B	GREEN flashing fast	Traffic on port 2
	GREEN flashing at 1 Hz	Port not commissioned
	RED permanent	Port 2 damaged
	RED flashing fast	Traffic overload on port 2
C	GREEN	IP port is fully functional
	YELLOW	IP port functional but config. is not up-to-date
	RED	IP port is non-functional
	Flashing at 1Hz	IP port not commissioned
	OFF	IP port not active
D	GREEN	Ethernet link
E	GREEN flashing	Ethernet traffic
F	GREEN	User defined LED
G	GREEN	Power
H	OFF	Normal operation

Connectors	
1	EIA-709 input EARTH GND port 2
2	EIA-709 input B port 2
3	EIA-709 input A port 2
4	EIA-709 input EARTH GND port 1
5	EIA-709 input B port 1
6	EIA-709 input A port 1
8	Ethernet 10/100 BaseT (RJ45)
15	Power supply input earth ground
16	Power supply input MINUS
17	Power supply input PLUS ⚠ Do not connect to GND
19	Digital input 0
20	Digital input 1
21	Digital input GND
40	RS-232 interface (DB9 male)

Buttons	
a	Reset
b	Send service pin message

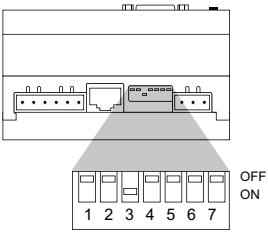

DIP1	DIP2	Function
ON	ON	Smart switch mode
ON	OFF	Repeater mode
OFF	ON	Smart switch mode/ subnet learning
OFF	OFF	Configured EIA-709 router

DIP3	Function (RS-485 version only)
ON	Bit-rate auto detection on
OFF	Bit-rate auto detection off

DIP4	Must be OFF
DIP5	Must be OFF
DIP6	Must be OFF

DIP7	Function
ON	Routing between FT Port 1 – FT Port 2
OFF	Routing between FT Port 1 – IP852

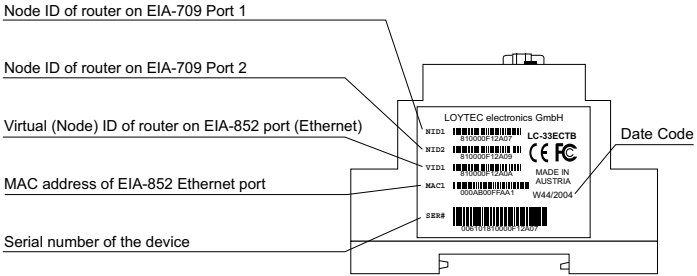

Document 88068901
11/2004
Printed in Austria
Data is subject to change

LOYTEC

http://www.loytec.com
support@loytec.com