LINX-20x Automation Server, BACnet

Installation instructions

Instructions de montage

Montageanweisung

Montagevoorschrift

Instruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

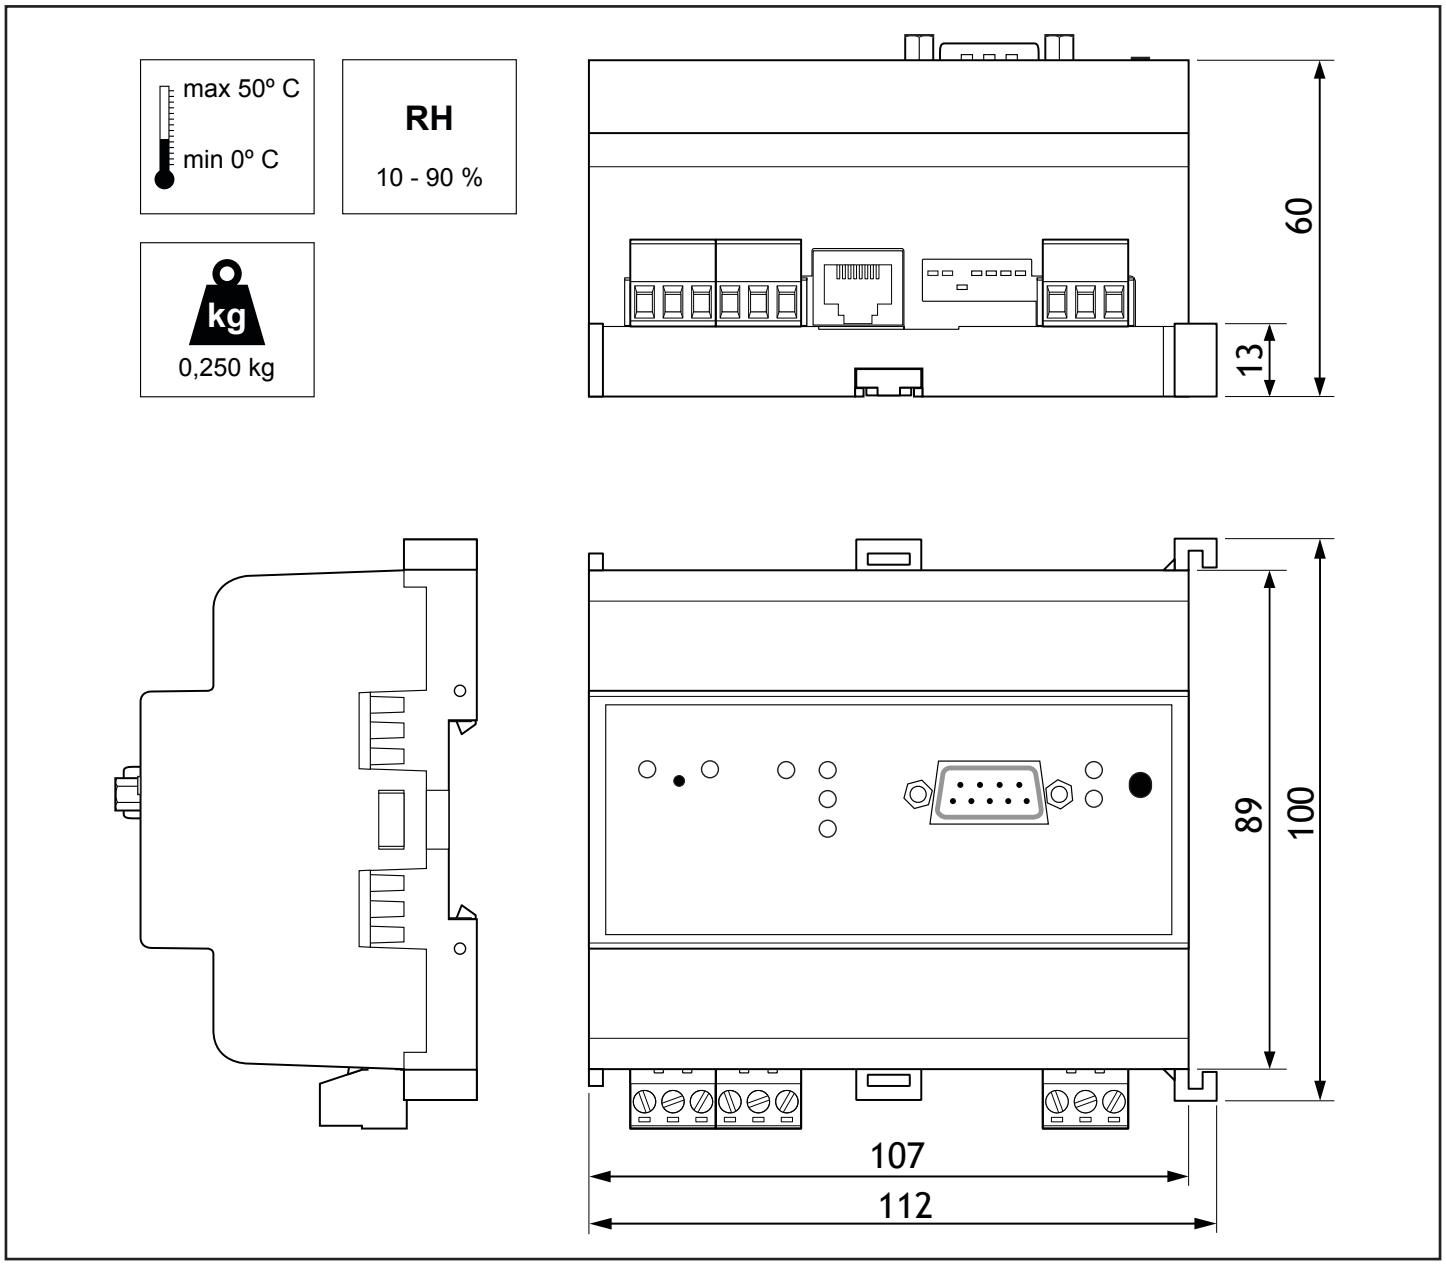

LOYTEC

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

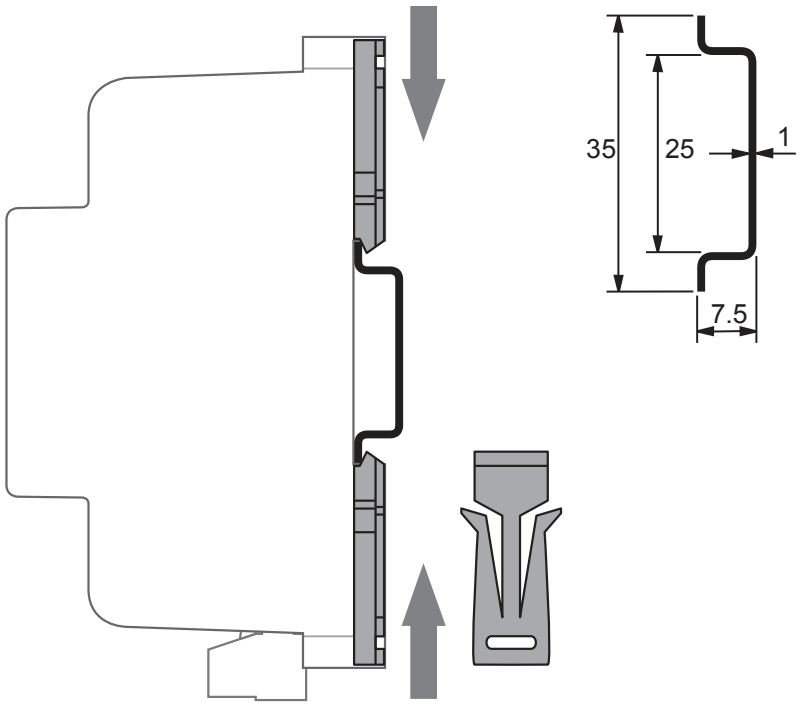

http://192.168.1.254
User: admin
Password: loytec4u

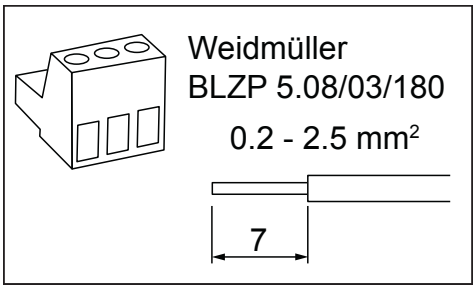

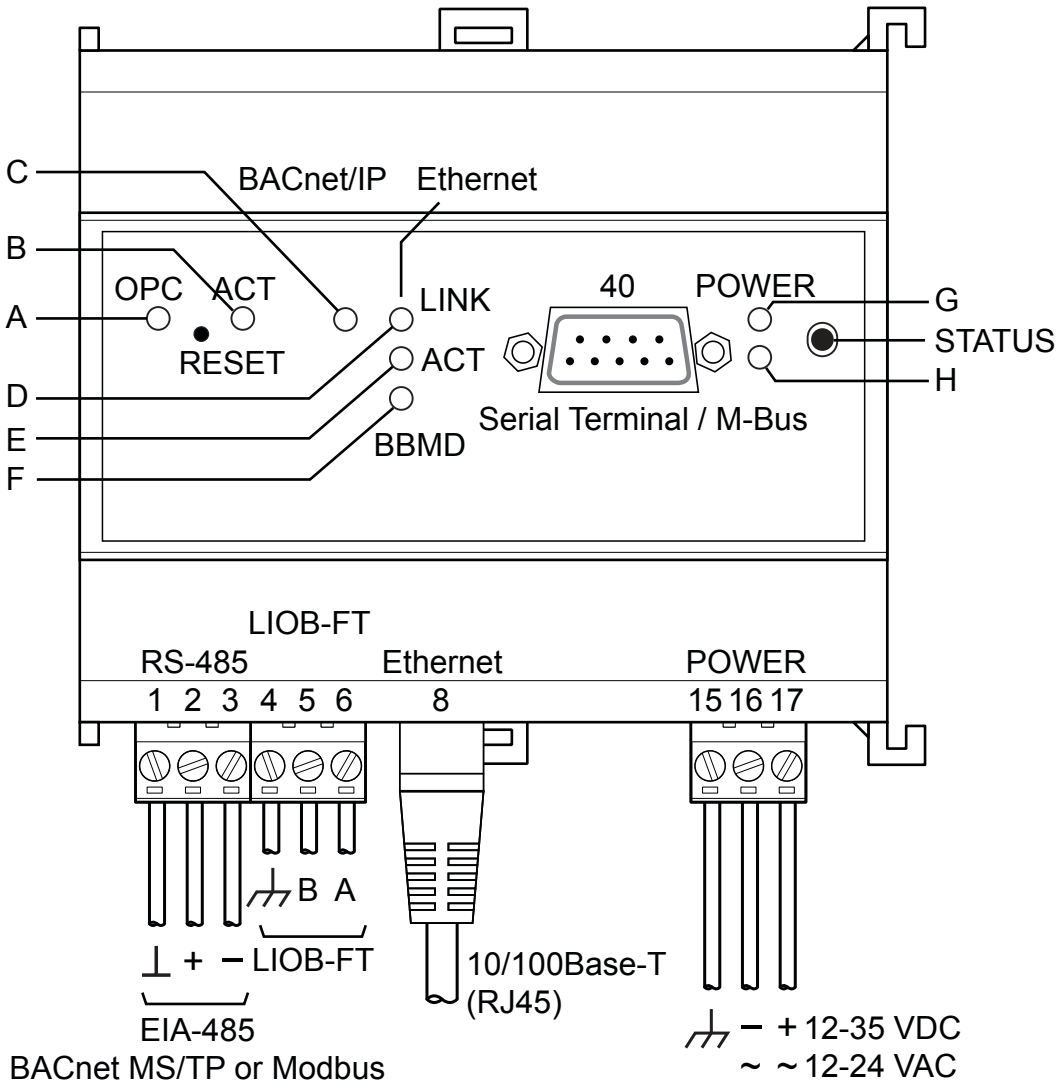

Connectors		
EIA-485 MS/TP Modbus	1 2 3	Input GND Input + (B) non-inverting input Input – (A) inverting input
LIOB-FT	4 5 6	Input EARTH GND Input B Input A
Ethernet	8	10/100Base-T (RJ45)
POWER	15 16	Power supply input EARTH GND Power supply input MINUS Can be connected to EARTH GND
SERIAL	17 40	Power supply input PLUS ⚠ Must NOT be connect to EARTH GND EIA-232 (DB9 male) Terminal or M-Bus depending on DIP switch No. 7

Status LEDs		
A	Green Green flashing	OPC client connected OPC activity
B	Green flashing	Traffic on BACnet MS/TP port
C	Green flashing	Traffic on BACnet/IP port
D	Green	Ethernet link
E	Green flashing	Ethernet traffic
F	Green	LINX-200:OFF LINX-201:BBMD enabled
G	Green	Power
H	OFF	Normal operation

NOTE: If terminal 1 is not connected make a short between terminal 15 and 16, and connect to EARTH GND.

Buttons	
RESET STATUS	Reset Send “I AM” message

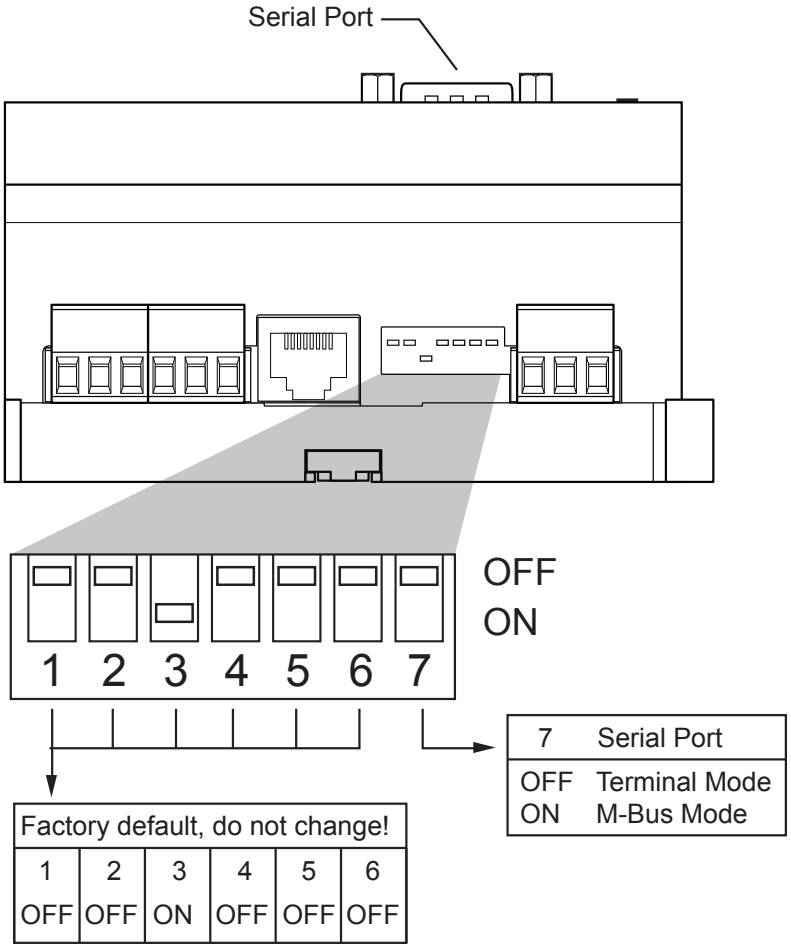

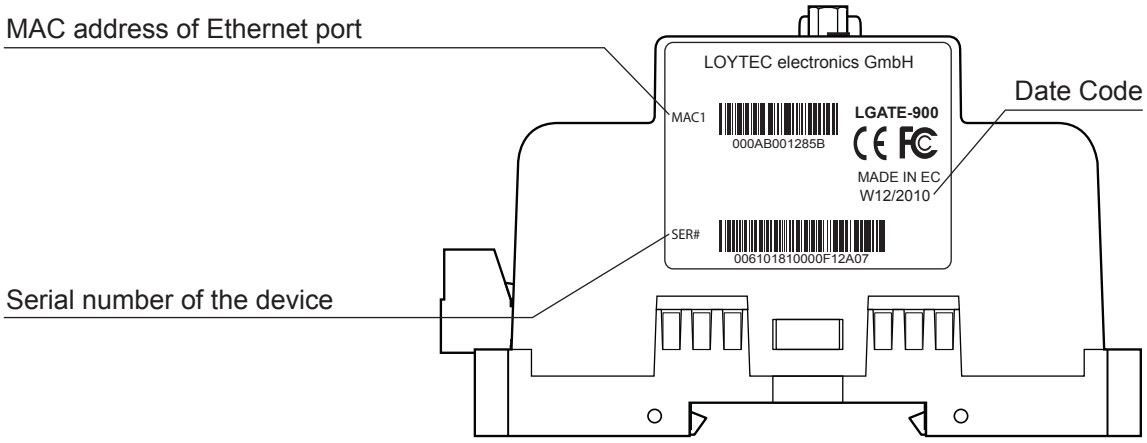

Document 88074103 Web edition
05/2011
Printed in Austria
Data is subject to change

LOYTEC
http://www.loytec.com
support@loytec.com