

NIC709-USB

NIC709-USB100 EIA-709/USB Interface

Installation instructions

Instructions de montage





Istruzioni di montaggio

Montageanweisung


Instrucciones de montaje

Montagevoorschrift

Monteringsanvisning

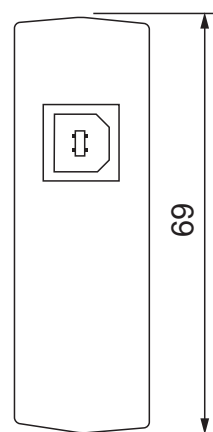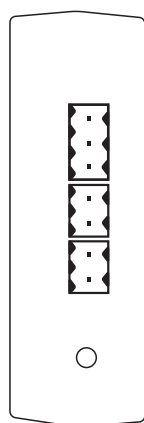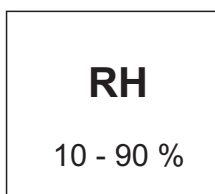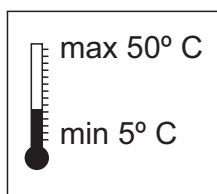


0,5 - 2,5 mm²

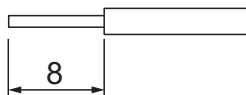

Euroclamp SH3-5.08


Euroclamp SH3-5.08

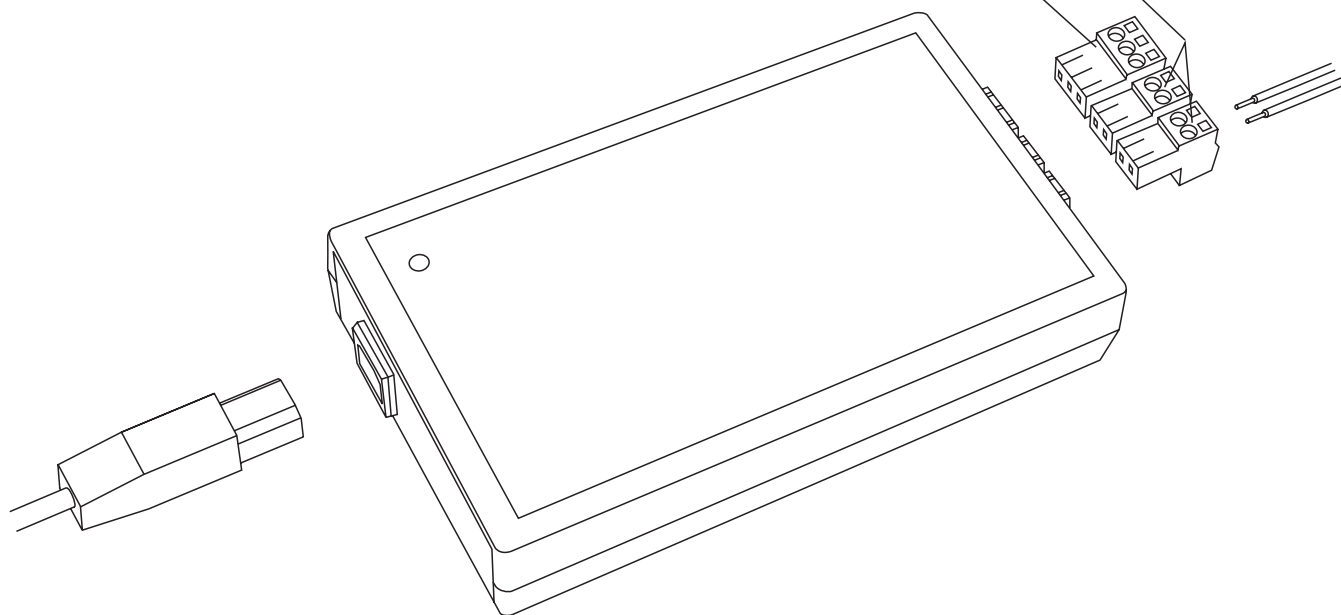

Date Code

Serial number of the device



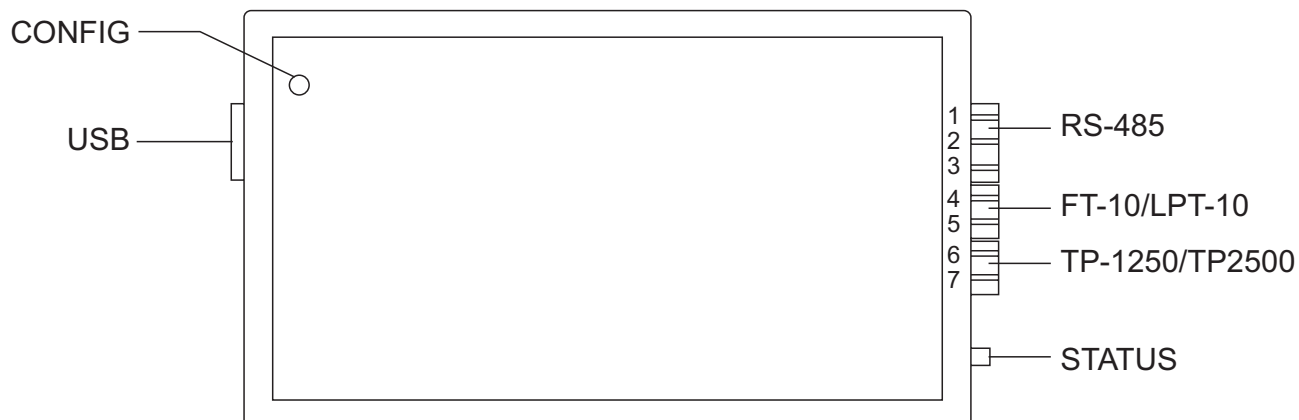

CONFIG LED	
ON	Connection to PC established, applicationless
OFF	Configured online
Flashing	Unconfigured

RS-485 Connector	
1	RS-485 input EARTH GND
2	RS-485 input B
3	RS-485 input A

STATUS Button
Press to identify in L-Config tool

FT-10/LPT-10 Connector	
4	FT-10/LPT-10 input B
5	FT-10/LPT-10 input A

USB Connector
Connect with USB cable to PC

TP-1250/TP-2500 Connector	
6	TP-1250 input B
7	TP-1250 input A

**Please download the latest NIC Software from
our webpage www.loytec.com**