

LINX-153 / LROC-102

Automation Server / Room Controller

Installation instructions

Instructions de montage


Montageanweisung


Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

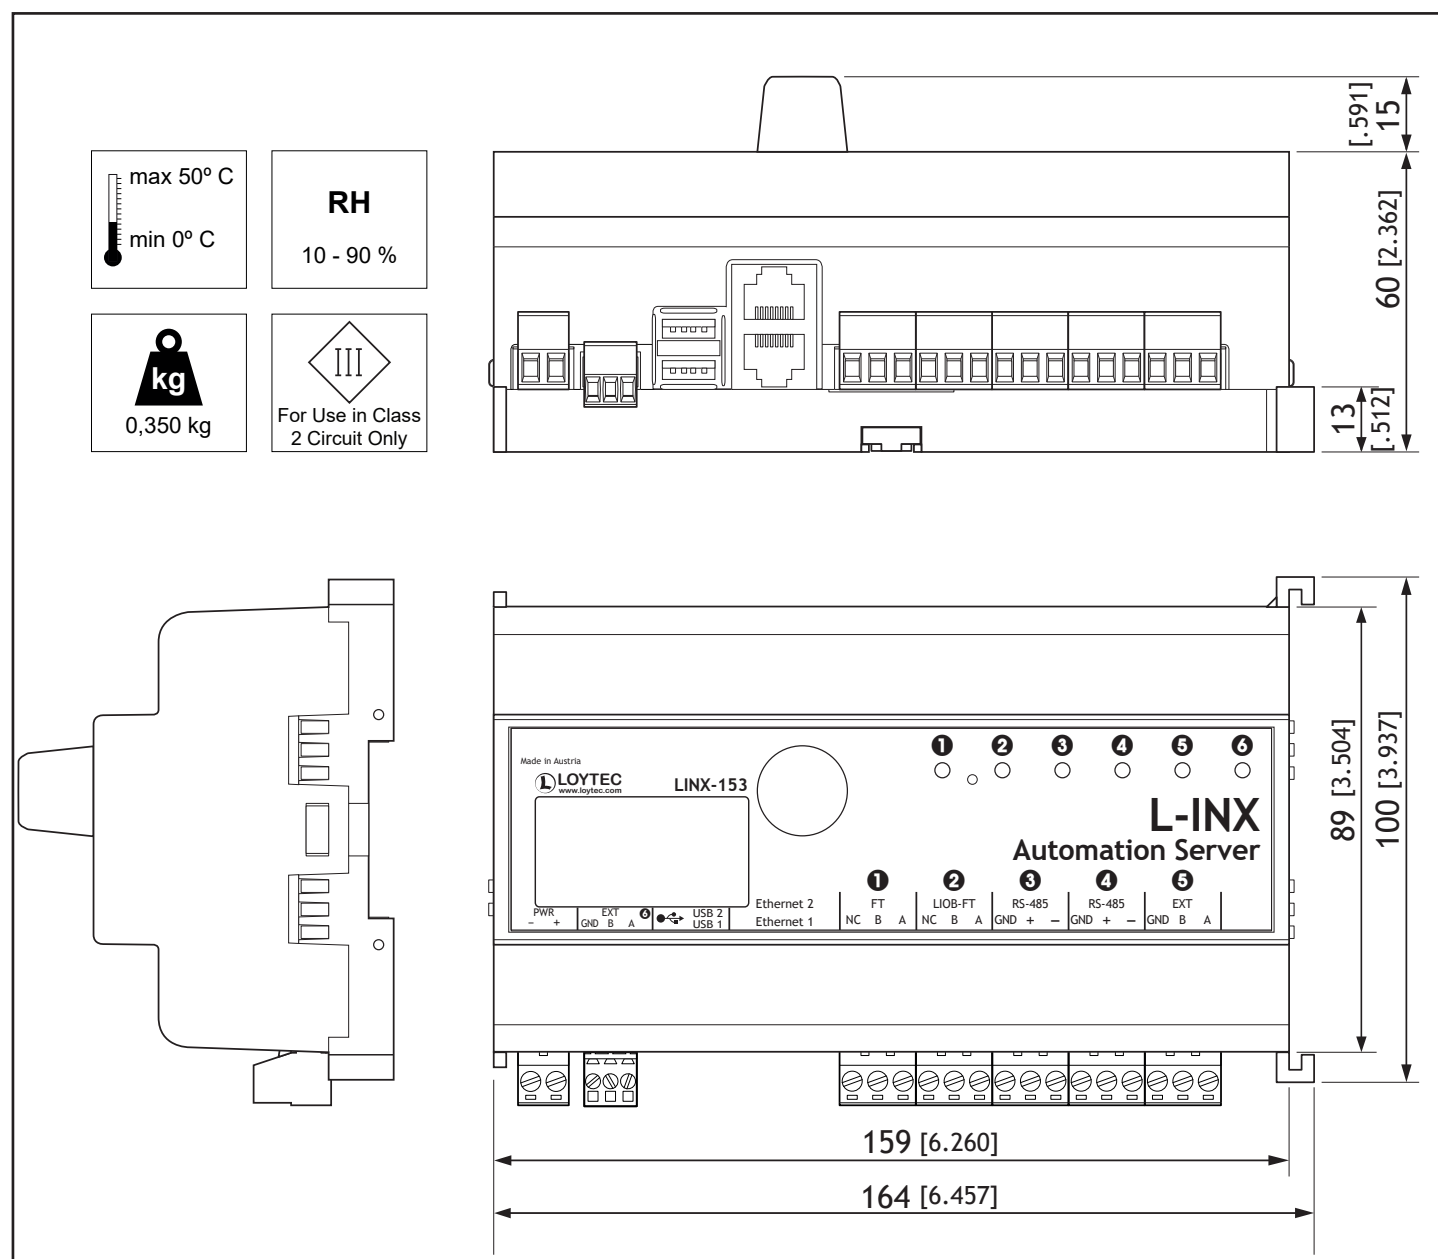


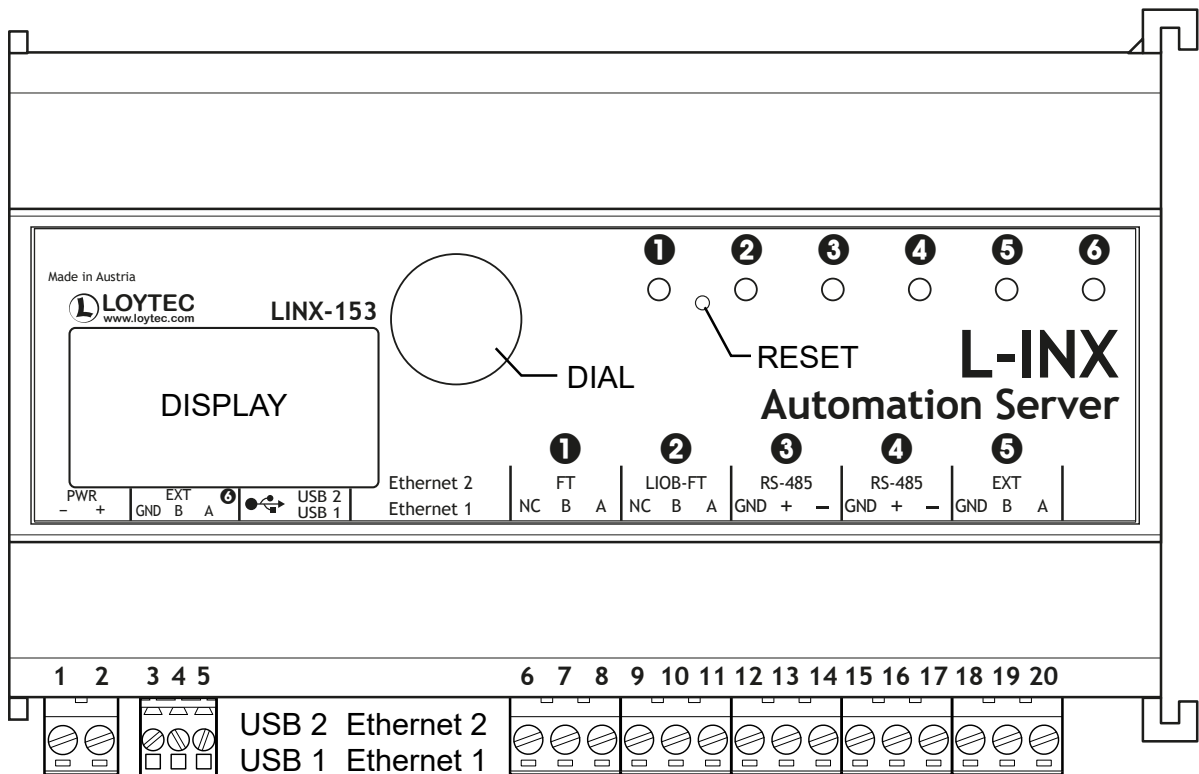

Connectors		
POWER 24 V DC/ VAC SELV	1	Power supply input -
	2	Power supply input + ⚠ Input + must NOT be connected to EARTH GND
EXT PORT 6	3	GND
	4	B
	5	A
CEA-709 TP/FT-10 PORT 1	6	NC
	7	B
	8	A
LIOB-FT PORT 2	9	NC
	10	B
	11	A
RS-485 PORT 3	12	GND
	13	+
	14	-
RS-485 PORT 4	15	GND
	16	+
	17	-
EXT PORT 5	18	GND
	19	B
	20	A

Connectors		
USB1 USB2	USB-A USB-A	USB Device USB Device
Ethernet1 Ethernet2	RJ45 RJ45	10/100Base-T 10/100Base-T
Buttons		
RESET DIAL	Reset Turn-and-Push Dial	



4.5 lb-in/0.5 Nm

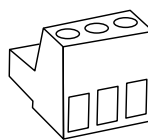


Weidmüller
BLZP 5.08/03/180
BLZP 5.08/02/180
BL 3.50/03/180 SN OR BX

Weidmüller
BL 5.08
0.2 - 2.5 mm²

Weidmüller
BL 3.5
0.2 - 1.5 mm²




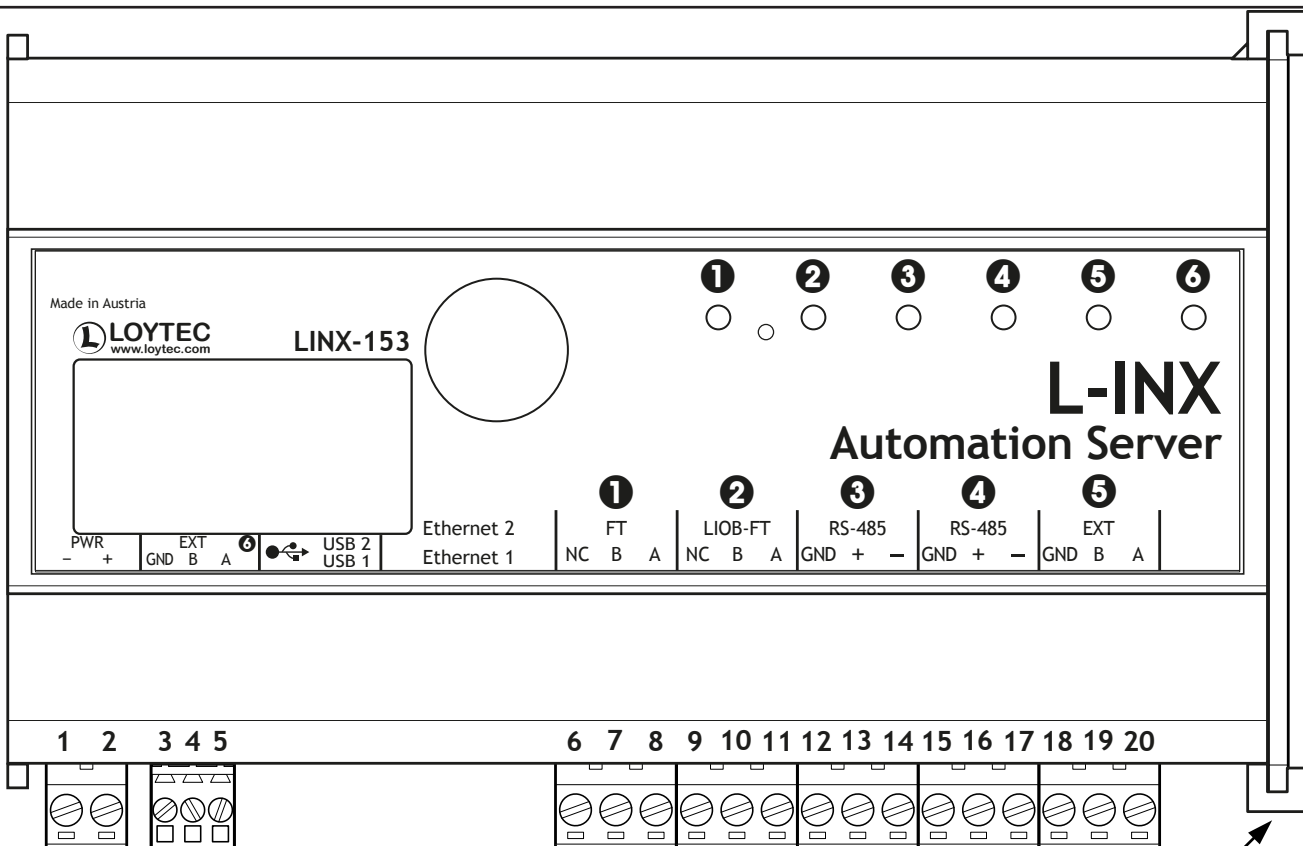

STATUS LEDs

FT	GREEN flashing fast GREEN flashing 1 Hz RED permanent RED flashing fast	Traffic on CEA-709 port Not commissioned CEA-709 port damaged CEA-709 traffic overload
LIOB-FT	GREEN flashing RED permanent RED flashing fast	Traffic on LIOB-FT port LIOB-FT port damaged LIOB-FT traffic overload
RS-485		
MODBUS	GREEN flashing RED flashing	Modbus traffic Transmission errors
MS/TP	GREEN flashing fast ORANGE flicker RED permanent RED flashing fast	Token ok, traffic Single master, traffic Token lost, cable damage Communication errors
EXT	GREEN GREEN flashing RED permanent RED flashing fast	M-Bus/KNX link M-Bus/KNX activity M-Bus/KNX port damaged M-Bus/KNX traffic overload

Install the cover

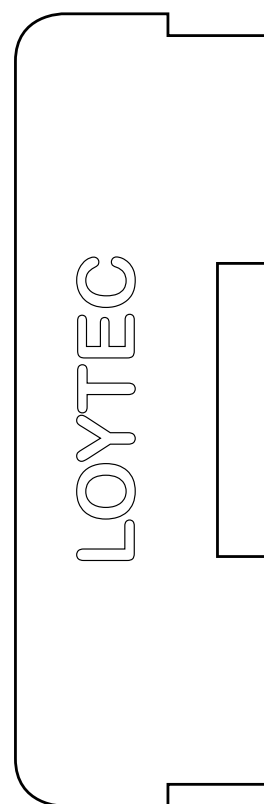


Please update the firmware of the device first,
see www.loytec.com

License Notice: This product contains components covered by the GPL and LGPL.
Details on device Web UI or <http://loytec.com/os/>

DHCP enabled
User: admin

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

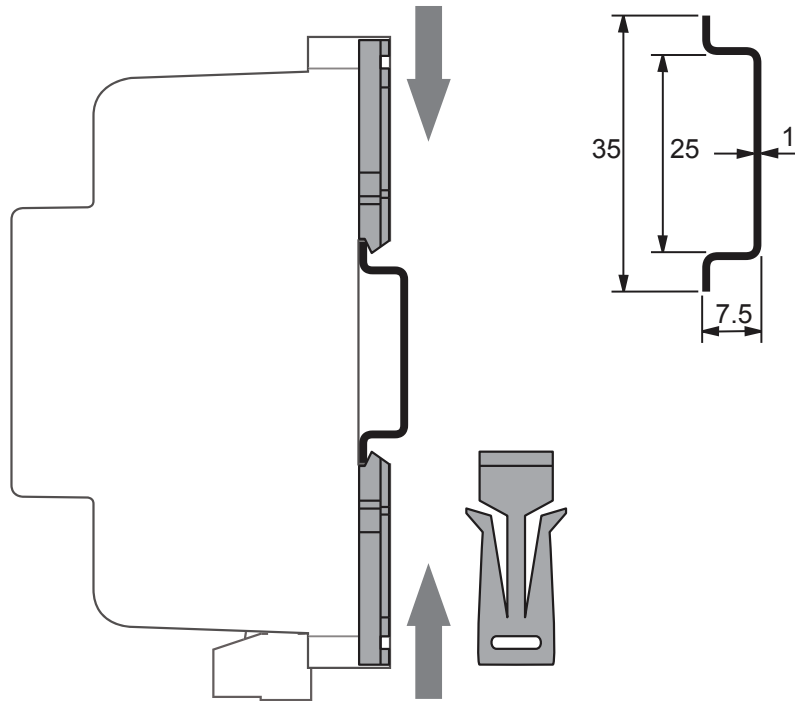

Node ID of CEA-709 Port 1

Virtual (Node) ID of CEA-852 port (Ethernet)

MAC address of CEA-852 Ethernet port

Serial number of the device

